

# GRADY-WHITE BOATS

## TABLE OF CONTENTS

---

### Welcome Aboard

### Consumer Information

Owner's Packet, Warranty Information, Dealer's Responsibilities,  
Consumer Responsibilities, Hazard Warning Symbols

## CHAPTER 1 BOATING SAFETY

<b>Required Safety Equipment.....</b>	<b>1-1</b>
Fire Extinguisher.....	1-1
Personal Flotation.....	1-1
Sound Signaling Device.....	1-1
Visual Distress Signals.....	1-1
Lighting.....	1-1
<b>Additional Recommended Equipment.....</b>	<b>1-1</b>
<b>Registration Numbers.....</b>	<b>1-1</b>
<b>Emergency Stop Switch.....</b>	<b>1-2</b>
<b>Emergency Information.....</b>	<b>1-2</b>
Rendering Assistance.....	1-2
Accident Reporting.....	1-2
Lightning Precautions.....	1-2
<b>Boating Safety Tips.....</b>	<b>1-3</b>
<b>Certification.....</b>	<b>1-4</b>
<b>Loading Capacity.....</b>	<b>1-5</b>
<b>Carbon Monoxide.....</b>	<b>1-5</b>
<b>Suggested Boating Classes and Reading Material.....</b>	<b>1-6</b>

## CHAPTER 2 GENERAL INFORMATION

<b>Fueling.....</b>	<b>2-1</b>
<b>Discharge Regulations.....</b>	<b>2-2</b>
Discharge of Oil.....	2-2
Disposal of Plastics and Other Garbage.....	2-2
<b>Fuel Select Valve.....</b>	<b>2-3</b>
<b>Boarding/Stowage.....</b>	<b>2-3</b>
<b>Driving.....</b>	<b>2-3</b>
<b>Trailing.....</b>	<b>2-3</b>
<b>Pre-Start Check List.....</b>	<b>2-4</b>
<b>Approaching/Leaving the Dock.....</b>	<b>2-4</b>
<b>Towing or Being Towed.....</b>	<b>2-4</b>
<b>Shallow Water.....</b>	<b>2-5</b>
<b>Anchoring.....</b>	<b>2-5</b>
<b>Windlass.....</b>	<b>2-5</b>
<b>General Information on Boat Handling.....</b>	<b>2-6</b>
<b>Twin Engine Boats.....</b>	<b>2-6</b>
<b>Commonly Used Nautical Terms.....</b>	<b>2-7</b>

## TABLE OF CONTENTS CONTINUED

### CHAPTER 3 PERFORMANCE

<b>Performance Factors</b> .....	<b>3-1</b>
Engine Efficiency.....	3-1
Weather Conditions.....	3-1
Load Distribution.....	3-1
Marine Growth.....	3-1
<b>Trim</b> .....	<b>3-1</b>
<b>Propeller</b> .....	<b>3-2</b>
<b>Propulsion System</b> .....	<b>3-2</b>
<b>Engine Warranty</b> .....	<b>3-3</b>
<b>Throttle/Shift Control</b> .....	<b>3-3</b>
<b>Steering</b>	
Hydraulic Steering.....	3-4
Tilt Steering.....	3-4

### CHAPTER 4 GAUGES AND SWITCHES

<b>Mercury and OMC Engine Instrumentation</b> .....	<b>4-1</b>
Fuel Gauge.....	4-1
Oil Quantity Gauge.....	4-1
Tachometer.....	4-1
Trim Gauge.....	4-1
Voltmeter.....	4-1
Water Pressure Gauge (OMC rig only).....	4-2
Water Temperature Gauge (Mercury rig only).....	4-2
Water Temperature, Oil Level, and Fuel System Warning.....	4-2
<b>Yamaha Engine Instrumentation</b> .....	<b>4-2</b>
<b>Digital Speedometer</b> .....	<b>4-2</b>
<b>Digital Tachometer</b> .....	<b>4-4</b>
<b>Digital Fuel Management Gauge</b> .....	<b>4-3</b>
<b>Switch Panel</b> .....	<b>4-4</b>
Bilge Pump.....	4-4
Cockpit Lights.....	4-4
Fuel.....	4-5
Horn.....	4-5
Livewell.....	4-5
Washdown.....	4-5
Navigational/Anchor Lights.....	4-5
Primer Pump Switch.....	4-5
Wipers.....	4-5
Accessory.....	4-5
<b>Light Bulb Replacement Guide</b> .....	<b>4-6</b>
<b>Accessory Wiring Color Code and Fuse Chart</b> .....	<b>4-7</b>
<b>Typical Outboard Switch Panel Wiring Diagram</b> .....	<b>4-8</b>



# CHAPTER ONE

## BOATING SAFETY

### REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat between 26 and 40 feet have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements. Reference the *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL*, page 17, for minimum requirements pertaining to the items listed below.

#### **FIRE EXTINGUISHER**

Your boat must be equipped with (2) marine approved fire extinguishers. Check extinguishers regularly for charge status.

#### **PERSONAL FLOTATION**

All passenger must have a USCG approved personal flotation device (PFD).

**Children and non-swimmers are advised to wear a PFD at all times.**

#### **SOUND SIGNALING DEVICE (HORN, WHISTLE OR BELL)**

Your Grady-White is equipped with a marine horn that meet the USCG stipulations of a sounding device on board.

#### **VISUAL DISTRESS SIGNALS**

USCG approved visual distress signals are required for day and night use when operating on US waters.

#### **LIGHTING**

Grady-White boats are equipped with navigational lights that meet the requirements for inland or international waters.

### ADDITIONAL RECOMMENDED EQUIPMENT

In addition to the required safety equipment, there are additional items that will provide an extra margin of safety and convenience for you and your passengers while boating. For an extended list of basic gear, tools and spare parts reference the pamphlet *Sportfish, Cruisers, and Yachts Owner's Manual* enclosed with this manual.

Keep tools and spare parts in good condition. Replace parts removed from spare parts kit. Most importantly use US Coast Guard approved or marine certified parts where applicable. Conditions found requiring corrective action should be worked on by a qualified repairman.

### REGISTRATION NUMBERS

Federal and State laws require a power boat to be registered in the State where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN is located on the upper right hand corner of the transom and is the most important identifying factor. The HIN should be included on all documents or any correspondence to provide you timely service.

# BOATING SAFETY

## EMERGENCY STOP SWITCH

Some Grady-Whites are equipped with an emergency stop switch. This is a safety feature that, if used properly, will shut the engines down if the operator leaves or falls from the helm position. This ignition shutdown switch includes a shut-off switch, switch clip, lanyard and lanyard clip. The lanyard clip is attached to the operator. If a situation arises where the boat should stop, a pull on the cord to release the clip from the shut-off switch will shut down the engines. To reset the emergency stop switch, simply reinstall the switch clip. The ultimate decision to use the emergency stop switch rests with the owner/driver. See page 72 of the *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL*.

## EMERGENCY INFORMATION

While boating, unpleasant situations may develop. When emergency situations materialize you should prepare yourself on how to cope with them, whether they happen aboard your vessel or someone else's. Anticipate a game plan for specific situation that may occur such as fire, man overboard or collision etc., to give you the confidence and ability necessary for an emergency. The key factor is to remain calm. For emergency procedures, see Section 4 in the *Sportfish, Cruisers, and Yachts Owner's Manual*.

## RENDERING ASSISTANCE

The owner or operator of a vessel is required by law to render all practical or necessary assistance to any person or vessel affected by collision, accident or casualty. **However, you should not endanger your vessel or passengers to render assistance.**

## ACCIDENT REPORTING

Report all boating accidents to your local authorities. Federal regulations require boat operators that are involved in an accident to submit a written report within 48 hours. ***In the event of death or disappearance notification is required immediately*** by phone or radio in addition to the written report. These reports can be submitted to the State Boating Law Administrator. Forms can be obtained through the USCG, local harbor patrol offices, sheriff and police stations.

## LIGHTNING PRECAUTIONS

This awareness is included to ensure the safety of the owner and passengers. Always be mindful of the weather! See page 16, in the *Sportfish, Cruisers, and Yachts Owner's Manual*. When a lightning storm advances certain safety precautions should be taken. Dock the boat and seek shelter on land. If this is not possible seek refuge inside the boat until the storm has passed. **Stay out of the water!** Lightning will seek a ground when it strikes and may pass through metal components if it hits your boat. For this reason, avoid contact with metal parts of the boat under these conditions.

## BOATING SAFETY

### BOATING SAFETY TIPS


Safety is an important aspect of boating. Your safety as well as the safety of your passengers and vessel are your responsibility. The following precautions and the ones mentioned in *Sportfish, Cruisers, and Yachts Owner's Manual* will add to you and your passenger's boating safety and pleasure.

- Study all Operation and Maintenance Manuals for your Grady-White before operation. For any questions or concerns contact your dealer. Proper operation and maintenance will insure quality performance and the longevity of your boat.
- A written float plan left with a reliable person will be valuable information if you have a mishap and do not return on time. **Upon returning** inform the holder of the float plan to prevent false alarms about your safety.
- **Never operate or allow anyone to operate your boat while under the influence of drugs or alcohol.**
- **Do not allow individuals under 16 years of age to operate your boat. Inexperienced drivers should not be allowed to operate the boat without constant and direct supervision.**
- Instruct at least one person to pilot your boat and be familiar with basic boating techniques and safe operation in the event of an emergency.
- While boating, passengers should be settled in a safe position. Handholds and rails should be used. **Do not allow** bow-riding, transom or gunnel riding.
- Keep your boat speed under control. Respect for other boaters and those on shore is common courtesy. The operator of the boat is responsible for any injury or damage caused by the boat's wake. Your wake could swamp or damage a smaller craft or endanger its passengers. Stay alert for posted "**No Wake Zones**".
- **Never allow swimmers/skiers to enter or exit the boat with the engines running.** A shift lever in neutral could become engaged causing severe harm to swimmers. **Do not operate your boat in swimming or diving areas at any time.**
- When venturing into foreign waters collect information on the boating area. Obtain charts for new areas whenever possible.
- Recommend boat shoes or tennis shoes to passengers to prevent slipping or falling.
- Read and understand the "Rules of the Road" in *Sportfish, Cruisers, and Yachts Owner's Manual*, Section 2 page 19, for a better understanding of who has the right of way when crossing or taking over another vessel. This will provide you with guidance on signaling for particular situations.

## BOATING SAFETY

### CERTIFICATION

At the helm station, you will find a NMMA (National Marine Manufacturers Association) Yacht Certification tag. This means your yacht complies with the Coast Guard safety standards. (NOTE: Any boat with an overall length of 26 feet or greater is defined as a "yacht" by NMMA.)

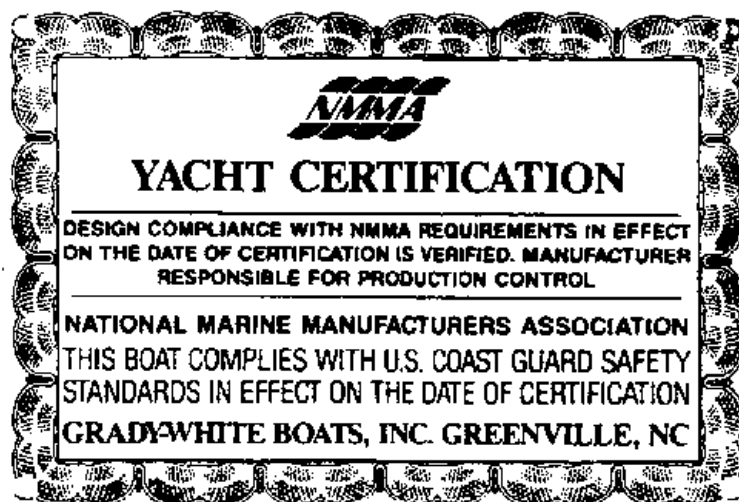

This label means that your Grady-White is certified by the NMMA. With this tag, you are assured that your fuel system, electrical system, lighting, ventilation, and steering, are not only in compliance with the US Coast Guard regulations, but also meet the more stringent standards of the NMMA. The NMMA is a national trade organization serving all elements of the recreational boating industry, including manufacturers of boating equipment. With this tag, you can have confidence in the safety of your boat.

### BASIC FLOTATION

THIS BOAT HAS "BASIC FLOTATION" AS  
DEFINED BY ABYC STANDARD H-8.

This label means that Grady-White has designed and built your boat to the ABYC basic flotation standard H-8. Basic flotation is defined as having enough foam, in the boat, to create buoyancy and prevent sinking under swamped conditions.

## BOATING SAFETY

### LOADING CAPACITY

Though overloading is a primary cause of many boating accidents, improper loading is equally hazardous. Boaters should know the amount of weight on board and evenly **distribute** the weight within the boat.

### CARBON MONOXIDE

**DO NOT INHALE EXHAUST FUMES! EXHAUST FUMES CONTAIN CARBON MONOXIDE, A DANGEROUS AND POTENTIALLY LETHAL GAS.**

Exhaust fumes contain carbon monoxide (CO), an odorless and colorless gas. Carbon monoxide is poisonous and a health hazard that can be fatal if breathed over an extended period of time. Symptoms of CO poisoning can include: dizziness, nausea, headache, sleepiness, vomiting, throbbing in temples, muscular twitching and the inability to think clearly. **If you or anyone else experience these symptoms immediately get away from fumes and into an area where plenty of FRESH air can be consumed. If any symptoms from above persist seek medical attention.**

Carbon Monoxide is the gas formed by the combination of one molecule of carbon and one molecule of oxygen. Chemists refer to it as CO, its chemical formula "C" for carbon and "O" for oxygen. Its weight is about the same as air so it cannot be expected to rise or fall like some other gases but will distribute itself throughout space.

**Carbon monoxide can accumulate in cabins and under canvas.** If your boat is equipped with canvas that encloses the aft cockpit and the propulsion equipment **do not** operate the boat with this canvas closed.

**The boat operator should be aware that CO is emitted from any boat's exhaust.** The operation, mooring and anchoring in an area containing other boats may be in an atmosphere containing carbon monoxide that is not of the operator's making. An operator, likewise, needs to be aware of the consequence of his actions on other boats. Of primary concern is the operation of an auxiliary generator with boats moored along side each other.

### **⚠ WARNING**

**When operating center console or cuddy cabin at cruising speeds, slow speeds, or dead in the water with canvas tops, side curtains and/or back curtains in place, be aware of engine exhaust to ensure that emissions do not accumulate in the boats interior. Maintain proper ventilation by adjusting canvas enclosure.**



# **BOATING SAFETY**

## **SUGGESTED BOATING CLASSES AND READING MATERIAL**

Like a car, boats must be operated according to safety rules and traffic regulations. Although we include some basic boating tips in this manual, a thorough review of the safety rules and regulations for boating is beyond the scope of this text.

We support the work of the United States Coast Guard Auxiliary and the United States Power Squadrons. We urge you to exercise the opportunity to attend any instructional classes sponsored by these organizations. Reference page 8 in *Sportfish, Cruisers, and Yachts Owner's Manual* for options on education and page 23 for information on charts and maps. For further knowledge on boating review the following publications:

### *PILOTING, SEAMANSHIP AND SMALL BOAT HANDLING*

(Chapman)\*

Motor Boating and Sailing  
Post Office Box 2319 -- F.D.R. Station  
New York, New York 10022

\*Available on CD ROM

### *PLEASURE BOATING AND SEAMANSHIP*

US Coast Guard Auxiliary  
306 Wilson Road Oaklands  
Newark, Delaware 19711

### *BOATMAN'S HANDBOOK*

by Tom Bottomly  
Motor Boating and Sailing  
Post Office Box 2319 -- F.D.R. Station  
New York, New York 10022

**FOR MORE INFORMATION ON BOATING SAFETY COURSES IN YOUR AREA, CALL  
BOATING EDUCATION HOTLINE 1-800-336-BOAT (2628),  
US COAST GUARD BOATING HOTLINE 1-800-368-5647 or  
CONTACT YOUR LOCAL COAST GUARD.**

## CHAPTER TWO GENERAL INFORMATION

### FUELING

#### **⚠ WARNING**

**Safety during fueling requires  
CAUTION and COMMON SENSE.**

Observe the following precautions carefully. Check with your dealer if you have questions. Check your engine manual to confirm the type of fuel and oil specified by the manufacturer. Do not use fuel containing alcohol. Alcohol in fuel will deteriorate the rubber material used to make up your fueling system.

- Have fire extinguisher near.
- Observe all safety regulations for the safe handling of fuel.
- Extinguish cigarettes and all other lighted materials.
- Before fueling shut down all engines.
- Before fueling close all ports, hatches, windows, and engine compartments to prevent fumes from accumulating in closed areas.
- Before fueling turn battery select switches to the "OFF" position to insure that all fans, lights, etc. are off.
- Keep the fuel supply nozzle in contact with the fuel tank opening to prevent any static sparks.
- Secure the fuel cap and check fuel lines and connections for leakage. Wash and clean-up any spilled fuel. Dispose of rags or sponges used for clean-up on shore. Do not store these clean-up rags in the boat.
- After fueling ventilate all ports, windows, hatches and other closed areas. Conduct a "sniff test" to make certain all fumes are vacant before using the battery select switches.

See warnings and check list in Section 6, page 37 of the *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL*.

Reference the Fuel Tank Compartment section under Maintenance for more information on cleaning the fuel storage area.

## GENERAL INFORMATION

### DISCHARGE REGULATIONS

The Federal Water Pollution Control Act prohibits the discharge of oil or any other hazardous substances which may be harmful into the US navigable waters. The US Coast Guard requires that any vessel 26 feet or greater display a placard in a prominent location notifying the crew and passengers of discharge restrictions. Each placard must be at least nine inches wide and four inches high, made of a durable material and printed with letters that are at least 1/8 of an inch in height.

### DISCHARGE OF OIL

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable waters and contiguous zones of the United States; if such discharge causes a film, sheen upon, or discoloration of the surface of the water or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty of \$5,000.

### DISPOSAL OF PLASTICS AND OTHER GARBAGE IN WATERS OF THE UNITED STATES





The MARPOL ANNEX V is the Act to prevent pollution from ships and other vessels. Federal regulations prohibit the discharge of plastic garbage anywhere in the marine environment. Plastic includes but is not limited to: synthetic fishing nets, ropes, lines, straws, six pack holders, styrofoam cups and lids, bottles, buckets and plastic bags. These regulations also restrict the disposal of other types of garbage within specified boundaries from shore. The following plaque will help you determine the specific distances offshore that certain garbage is permitted.

#### NOTICE

**It is illegal for any vessel to dump PLASTIC trash anywhere  
in the ocean or navigable waters of the United States.**

*It is illegal for any vessel to dump plastic trash anywhere in the ocean or navigable waters of the United States. Annex V of the MARPOL TREATY is an*

*International Law for a cleaner, safer marine environment. Violation of these requirements may result in civil penalty up to \$25,000, fine and imprisonment.\**


 U.S. Lakes, Rivers, Bays, Sounds and 3 miles from shore <b>ILLEGAL TO DUMP Plastic &amp; Garbage</b> Paper Metal Rags Crockery Glass Dunnage Food	3 to 12 miles  <b>ILLEGAL TO DUMP Plastic</b> Dunnage, lining & packing materials that float, also if not ground to less than one inch: Paper Crockery Rags Metal Glass Food	12 to 25 miles <b>ILLEGAL TO DUMP Plastic</b> Dunnage, lining & packing materials that float  *UP TO \$50,000 AND 5 YRS.	Outside 25 miles <b>ILLEGAL TO DUMP Plastic</b> 
---	---	--	---

State and local regulations may further restrict the disposal of garbage.

## GENERAL INFORMATION

### FUEL SELECT VALVE

You will have a manual fuel select valve installed if your boat is equipped with dual fuel tanks. This valve allows you to choose from which tank fuel will be consumed. Select the tank that allows the best performance for your boat. Remember as the fuel is consumed and the fuel load redistributes, performance will be influenced.

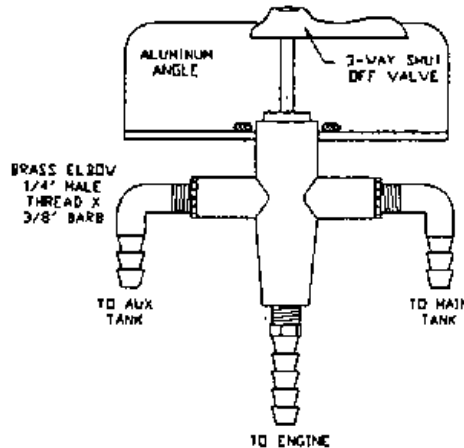

### BOARDING/STOWAGE

Reference the *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL* for information on how to board your boat and tips for stowage.

### DRIVING

Do not allow passengers to ride in the boat while trailering. Check brakes prior to leaving. Drive steady as possible and avoid sudden jerks. Anticipate stops to make them smooth. Road trips call for occasional stops to make sure the trailer is still secured properly.

### TRAILERING

The adjustment and balance of your boat on the trailer determines how easily your boat may be transported. The tongue weight on the hitch ball should be 5-10% of the total weight of your boat, motor and trailer. Tail-heavy loads cause swaying while trailering. The rollers and/or bunkers of your trailer should be adjusted so that the weight is distributed evenly across the stern and forward throughout the keel sections. Your dealer is capable of adjusting your trailer properly.

Practice maneuvering the trailer. The trailer always backs in the opposite direction of the vehicle. To maneuver the trailer, turn the steering wheel in the direction you want the trailer to go. Prior to initial launch familiarize yourself with this manual and all aspects of your boat. At the launch site go through a pre-launch checklist. The list should be suited to your specific needs.

Trailering and relative information is provided in the *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL* in Section 9, page 94.

## GENERAL INFORMATION

### PRE-START CHECKLIST

*SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL* provides a checklist for predeparture on page 35.

### APPROACHING/LEAVING THE DOCK

Unlike an automobile, the stern of your boat reacts first when turning. A turn to the right will swing the stern to the left and vice-versa. Remember that turning your boat away from an object such as a dock will tend to swing the stern toward that object. See Docking in your publication of *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL*.

### TOWING OR BEING TOWED

In the event of a mishap or power loss you may need to tow a boat or have yours towed. **Remember you should not tow a boat larger than your own.** Never tow a boat if you are not equipped with the proper lines. Nylon ropes are recommended. They have the strength and elasticity needed to absorb the shock of towing and sudden jerks. Individual should never hold a towline, always secure it to the boat.

Before towing a boat, make a bridle and tie it securely to the pad eyes on the transom with enough slack to clear the engines. Pad the line wherever it comes into contact with the boat to prevent chafing. Attach a tow line to the bridle so that it can slide from side to side to prevent too much pressure on a single pad eye. The tow line should then be attached to the bow eye or to a bridle on the towed boat. The tow line should be a minimum of twice the length of the towing boat, the longer the better. When passing the towline to the other boat do not try to run in too close. Send either a light line or attach the towline to a life preserver to be pulled in. Be aware of the other boat's propeller.

The towed boat should always have someone at the wheel since the boat may swing off course. Start the tow off slowly. A steady pull at a moderate speed should be used. It is important to keep the slack out of the propeller area. Watch the action of the towing boat. If excessive slack develops in the towline and contact is obvious turn in either direction to avoid hitting the stern.

### **⚠ WARNING**

**As a precaution passengers on both boats should stay clear of the towline, lines under stress could snap and fly in either direction causing injury.**

## GENERAL INFORMATION

### SHALLOW WATER

Most boats that becomes grounded can be floated off with motors tilted to reduce the draft at the transom. Do not try to power off if the propellers are in mud or sand due to possible damage to your engine's cooling system. With motors tilted, try rocking the boat from side to side to break the suction of mud from the keel. Move passengers or heavy objects from the point where the boat is grounded. Do not lower or start the engines until the boat is clear of the ground. Refer to shallow water in *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL*.

When boating in water with tidal changes be mindful of water level fluctuations. If you are grounded on an incoming tide you can wait until the tide is high enough to refloat your boat. However, on an outgoing tide quick action should be taken to refloat your boat. If this is not possible set an anchor to keep the boat from becoming driven further aground. Set the anchor to counter the action of the wind or current. The anchor, in some cases, can also be used to pull the boat free.

Many inland areas have rocks and stumps which could crack or puncture a fiberglass hull. Be familiar with the boating area and use caution in shallow water.

### ANCHORING

Some factors that determine the size and type of anchor most suitable for your boat include the size of your boat and the type of lake, sea or river bottom in your boating area. See page 46 in *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL* for more information on anchoring.

#### NOTICE

**It is illegal to tie your boat to navigational aids such as buoys and markers.**

#### ⚠ WARNING

**Never anchor off the stern of the boat especially in strong winds or currents. The weight of the stern and flat surface to the seas can easily cause water to enter over the transom and swamp the boat.**

### WINDLASS

Anchoring can be less laborious if your boat has a windlass accessory. If your boat is equipped with a windlass reference your windlass Operation Manual for instructions.

## **GENERAL INFORMATION**

### **GENERAL INFORMATION ON BOAT HANDLING**

The best method of learning how to handle and obtain the best performance from your boat is to practice and experiment. After several hours of operation you should experiment with the throttle settings to discover the setting that will be the most comfortable and economical range for your particular loading conditions.

We suggest that you make a speed/RPM chart in order to obtain the most economical operation. Operate the boat at various speeds and check the fuel consumption. Determine the amount of operating time remaining when the fuel gauge drops into the red band. Make a log of this type of information and have it available when using your boat. Other statistics you may want to determine could include the following:

- Minimum speed for effective steering.
- Turning radius at different speeds.
- Response to steering at low speeds.
- Acceleration and deceleration rates.
- Time and distance to bring the boat to a stop at different speeds.
- Control of the boat using both engines in close quarters.

Also read the section in *SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL* for information on safe operating speed.

### **TWIN ENGINE BOATS**

Twin engine boats are easy to maneuver. The boat will run ahead or backward in a straight line when both engines are working together at the same speed. When backing the engines can be used to steer to port as well as starboard.


Moving ahead on one engine will cause the bow to swing away from the running engine side and move forward at the same time. Backing up with one engine will cause the bow to swing toward the running engine side and the boat to move backward.

Running one engine ahead and one engine astern will cause the boat to turn end-for-end in little more than its own length.

Running both engines in the same direction at different speeds will cause the boat to move in the direction dictated by the faster engine but its influence will be modified by the slower engine.

# GENERAL INFORMATION

## COMMONLY USED NAUTICAL TERMS

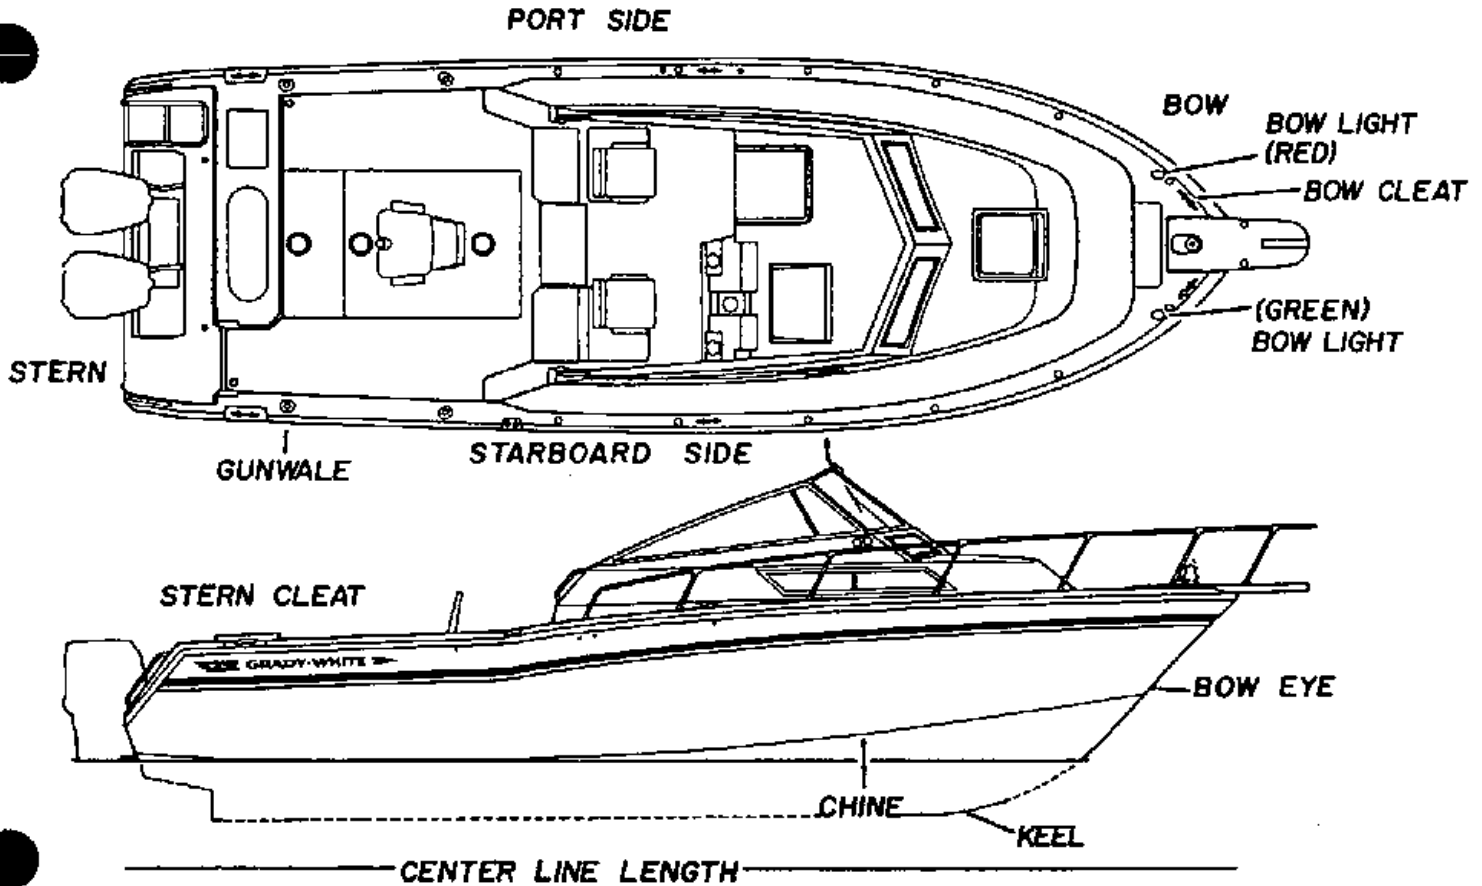

**ABEAM** - A line perpendicular to a boat's keel

**ACCESS PLATE** - A removable, watertight cover that provides quick entry to enclosed areas for maintenance or visual inspection

**AFT** - Toward the rear or stern of the boat

**BEAM** - The greatest width of a boat

**BILGE** - The lower interior area of the hull

**BOW** - The fore part of a boat

**BOW EYE** - A U-shaped hull fitting used to attach the trailer winch to the boat

**BULKHEAD** - Vertical partition in a boat

**CHINE** - Meeting juncture of topside and bottom of boat

**CLEAT** - Deck fitting with arms or horns on which lines are fastened

**DECK** - Upper structure which covers the hull

**DRAFT** - depth of water required to float a boat

**FATHOM** - A depth measurement equal to six feet

**FREEBOARD** - Height of topside from water line to the deck

**GUNWALE (OR GUNNEL)** - Meeting junction of hull and deck

**HATCH** - An opening in the deck to provide access below

**HEAD** - A toilet or toilet area in a boat

**HEADROOM** - Vertical distance between the deck and cabin or canopy top

**HULL** - The basic part of the boat; a watertight vessel that provides buoyancy to float the weight of the craft and its load

**KEEL** - The major longitudinal member of a hull - the lowest external portion of a boat

**KNOT** - Unit of speed in nautical miles per hour

**LEE** - The side that is sheltered from the wind

**LIST** - The tilt or lean to one side

**PORT** - A term designating the left side of the boat when facing forward

**SCUPPER** - Holes permitting water to drain overboard from deck or cockpit

**SHEER** - Curve or sweep of the deck as viewed from the side

**STARBOARD** - A term designating the right side of the boat when facing forward

**STERN** - The rear end of a boat

**STRINGER** - Longitudinal members fastened inside the hull for additional structural strength

**WAKE** - The track or path left in the water by a moving boat

**WINDWARD** - Toward the direction from which the wind is blowing (against the wind)



## **CHAPTER THREE PERFORMANCE**

### **PERFORMANCE FACTORS**

Maximum performance is dependent on many factors and cannot be guaranteed. These factors will vary with changing conditions. Some of these factors are listed below. Reference the trouble shooting guide, page 65, in *SPORTFISH, CRUISERS, YACHTS OWNER'S MANUAL* for additional suggestions on adjusting performance.

#### **ENGINE EFFICIENCY**

Engines operate most efficiently at the RPM confirmed in the engine Operating Manuals assuming your boat is equipped with the correct engines, the engines are properly tuned and the drive systems are in good condition. Efficiency will decrease if normal care and maintenance is not performed. If engines are neglected power will drop and speed will decrease. In addition, expensive repairs may become necessary. Be sure to follow all instructions in the engine Operation Manuals.

#### **WEATHER CONDITIONS**

Weather conditions affect engine performance. Barometric pressure and humidity both influence horsepower. A change of weather could cause a 10% loss in horse power on some hot days.

#### **LOAD DISTRIBUTION**

A decrease in performance will be noted when gear, equipment, passengers and fuel are added. This type of extra load will affect the performance of the boat according to the distribution of the weight. Water accumulation in the bilge, another type of extra load, will affect performance. Keep the bilge dry to eliminate this problem.

#### **MARINE GROWTH**

Maximum performance is obtained only when your hull bottom is clean. Marine growth on the bottom of the boat will increase resistance and decrease speed. These conditions will also increase fuel consumption.

### **TRIM**

Most outboard models are equipped with power tilt and trim mechanisms. The purpose of power tilt is to raise the engine for launching, loading or trailering your boat. Power trim may be used to adjust the boats planing performance and running attitude. Power trim is covered in detail in *SPORTFISH, CRUISERS, YACHTS OWNER'S MANUAL*.

Trim refers both to the weight distributions inside the boat and to the angle of thrust of the drive unit. The angle of thrust of the drive unit forces the bow up or down. The trim tabs on your boat also control the trim of the boat, similar to the power trim. Refer to the Trim Tabs section in Chapter 7 for additional information.


## PERFORMANCE

### PROPELLER

The condition of your prop has a major influence on the performance of your boat. Your engines should be equipped with the best size prop for normal conditions. Unusual uses or weight conditions may require special props. A damaged prop can affect your boat's top speed, cause vibrations, create a sudden drop in RPMs or even increase fuel consumption

#### **⚠ CAUTION**

**Stay within the engine manufacturer's maximum and minimum RPM ranges when replacing props. This information is located in your engine Manuals. If your boat does not have a tachometer consult your dealer for propeller changes.**

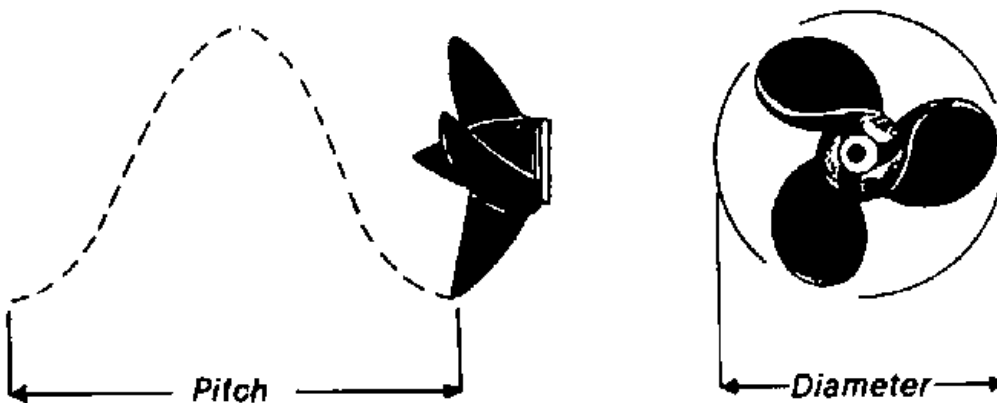

Pitch and Diameter are the two basic dimensions of a propeller.

Example of propeller dimension: 14 x 17

Diameter = 14

Pitch = 17

### PROPULSION SYSTEM

#### OUTBOARD

The engine manufacturer supplies all vital information concerning your engines in the Operation and Maintenance Manuals. Details of important engine functions such as the lubrication system, cooling system and alarm/monitoring system are outlined in these manuals. Your familiarization with this engine reference material will result in the proper usage and service that is essential for safe and enduring engine performance. These manuals are included with the Owner's Packet.

**DO NOT INHALE EXHAUST FUMES! EXHAUST CONTAINS CARBON MONOXIDE  
A DANGEROUS GAS WHICH IS POTENTIALLY LETHAL.**

## PERFORMANCE

### **⚠ WARNING**

**Do not attempt to service any engine or drive component without being totally familiar with the safe and proper service procedures. Certain moving parts are exposed and can be dangerous.**

### **⚠ CAUTION**

**Do not paint the outboard motors with anti-fouling paints designed for boat hulls. Many of these paints can cause severe damage to the engines.**

### **ENGINE WARRANTY**

A warranty registration card is included with all engine manuals and should be completed and returned to the engine manufacturer as soon as possible.


### **THROTTLE/SHIFT CONTROL**

The throttle/shift controls located at the helm station, control the flow of fuel to the engine and act as gear shift levers to control the forward and aft thrust of the propellers.


The middle position of the throttle control is usually the neutral position. Move the control forward to engage the shifting mechanism which creates a forward thrust of the propeller. Advance the forward movement to increase the fuel flow to the engine and boost the forward lunge.

Move the control lever aft of the neutral position to reverse the shift mechanism and create a reverse thrust of the propeller. Increase the aft movement to increase the reverse thrust. Remember that propellers are designed for maximum forward thrust so reverse thrust will not be as efficient.

All controls have a neutral safety mechanism. This mechanism will not allow the engine to start when the control is in gear. To increase the flow of fuel to the engine while remaining in the neutral position you may use the neutral lock out feature on the control handle.

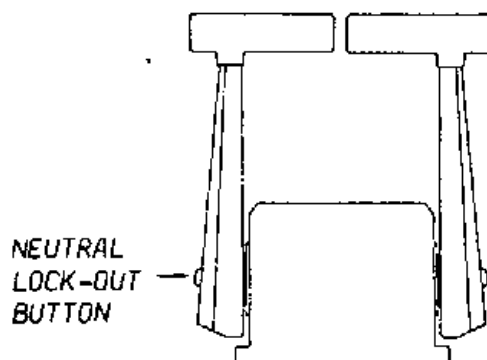

FOR MERCURY AND  
YAMAHA ENGINES

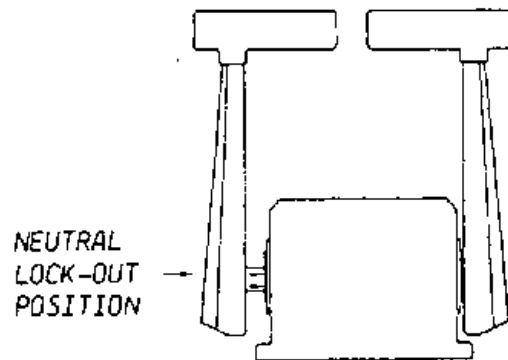

FOR OMC ENGINES

## PERFORMANCE

To stop a boat that is moving forward you may reverse the shift mechanism. This change in direction will provide a "braking action," slowing the boat.

### **⚠ CAUTION**

**BRAKING ACTION CAUSES A WAKE WHICH MAY RISE ABOVE THE TRANSOM AND FLOOD THE BOAT IF THE BOAT IS MOVING TOO FAST.  
ALLOW ENGINE RPMs TO DECREASE BEFORE SHIFTING INTO REVERSE.**

If your throttle or shift cables need replacing use the same style and length as the original equipment.

## STEERING

Most outboard engines are equipped with an adjustable rudder trim tab. This trim tab should be adjusted to balance the steering at the speed which you travel most frequently. Variations in speed, boat load or changes in the engine trim will cause the steering to pull in one direction. If the boat pulls to the left adjust the trim tab to the left and vice-versa.

### HYDRAULIC STEERING

Hydraulic steering systems (not to be confused with power steering) require regular preventative maintenance for continued safe and reliable operation. The oil level in the helm pump must be maintained within acceptable operating levels. A low oil level will cause air to be introduced into the steering system and result in unresponsive steering. The oil level should always be within 1/2 inch from the base of the fill hole located on the front top portion of the helm pump. Check the entire steering system regularly for oil leaks. Unobserved leaks over a period of time will result in unresponsive steering or loss of steering.

Any moving mechanical linkages, sliders, etc. should be greased as needed with a high quality marine grease. Refer to the manufacturer's steering manual for specific recommendations and additional maintenance.


Any slow or sudden change in the "feel" of your steering system indicates an immediate need for a thorough inspection. All repairs and replacements to steering systems should be made by an authorized repairman.

### TILT STEERING

Tilt steering is available as an optional feature. This feature enables the operator to tilt the wheel up or down. Refer to the steering system Owner's Manual for information on oil levels with tilt steering.

## CHAPTER FOUR GAUGES AND SWITCHES

### MERCURY AND OMC ENGINE INSTRUMENTATION

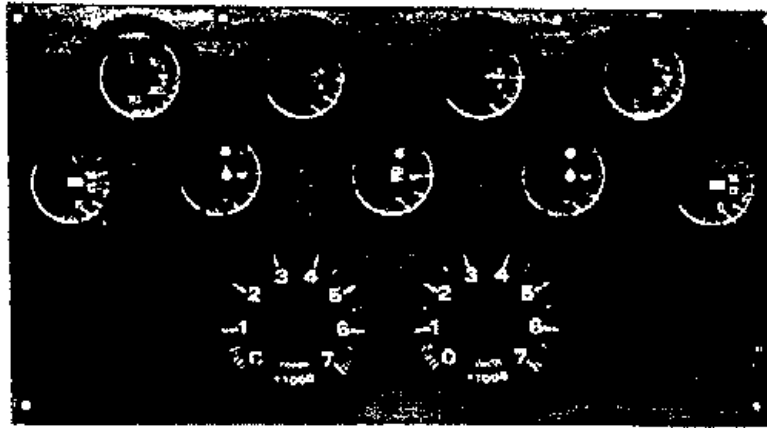

#### **FUEL GAUGE**

The fuel gauge indicates the fuel level. When reading this gauge remember two things: (1) the accuracy of your gauge varies with the attitude of your boat in the water (trim or list), (2) the fuel pickup tube inside the gas tank is not capable of withdrawing all of the fuel from the tank. For these reasons never operate your boat at extremely low fuel levels.

#### **OIL QUANTITY GAUGE**

OMC and Mercury pre-rigs are equipped with an oil quantity gauge that indicates the oil level in the tank.

#### **TACHOMETER GAUGE**

The tachometer indicates engine revolutions per minute (RPMs). Consult your engine Owner's Manual for the recommended operating RPM range.

#### **TRIM GAUGE**

The trim gauge indicates the angle of thrust of the lower unit of the engines.

#### **VOLTMETER**

The voltmeter indicates the battery charge with the engines off and the charging system output with the engine running. A reading of 12 or 13 volts with the engines off is normal indicating a fully-charged battery. Readings below 11 indicate a weak battery which may not start the engine(s). A reading of 13 to 15 volts when the engine is running is normal. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may indicate loose connections or trouble in the regulator and alternator circuit.

## GAUGES AND SWITCHES

### WATER PRESSURE GAUGE (OMC RIG ONLY)

The water pressure gauge indicates the water pressure in the engine cooling system. Readings help determine if water pressure is too low for adequate cooling. See the engine Owner's Manual for recommended operating range.


### WATER TEMPERATURE GAUGE (MERCURY RIG ONLY)

This gauge indicates the temperature of the cooling water circulating through the engine. When the temperature exceeds the recommended operating range for your engine immediately shut off the engine to prevent damage. Overheating is often caused by obstruction of your engine's water intake on the lower unit. Check the water intake strainer first if you experience trouble.

### WATER TEMPERATURE, OIL LEVEL AND FUEL RESTRICTION WARNING SYSTEMS

Outboard engines have several warning systems. The buzzer for these systems is located under the dash. Some models also have indicator lights in addition to the audible alarm. The purpose of the buzzer is to alert the driver to potentially damaging engine operating conditions. Consult your engine Owner's Manual for exact location and function of these systems.

## YAMAHA ENGINE INSTRUMENTATION

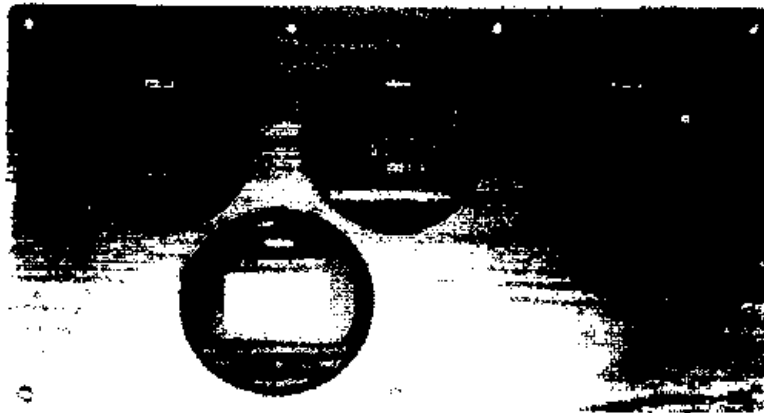

### DIGITAL SPEEDOMETER

#### BATTERY VOLTAGE INDICATOR

This feature indicates the battery charge when the engine is off and indicates the alternator output when the engine is running. A reading of 12 or 13 volts is normal indicating a fully-charged battery. Readings below 11 indicate a weak battery which may not start the engines. A reading of 13 to 15 volts when the engine is running is normal. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may indicate loose connections or trouble in the regulator and alternator circuit.

## **GAUGES AND SWITCHES**

### **CLOCK**

This feature is battery powered and may need to be reset if the battery select switch is turned to the "off" position.

### **FUEL METER**

This feature indicates the gas tank fuel level. When reading this gauge remember two things: (1) the accuracy of your gauge varies with the attitude of your boat in the water (trim or list), (2) the fuel pickup tube inside the gas tank is not capable of withdrawing all of the fuel from the tank. For these reasons never operate your boat at extremely low fuel levels.

### **LOW FUEL WARNING INDICATOR**

This feature indicates when the fuel level in the main fuel tank is becoming low.

### **OVERHEAT WARNING INDICATOR**

This feature indicates when the temperature of the cooling water circulating through the engine is too high. When the temperature exceeds the recommended operating range indicated by your engine owner's manual, immediately shut off your engine to prevent damage. Overheating is often caused by obstruction of your engine's intake on the lower unit. Check the intake strainer first if you experience trouble.

### **SPEEDOMETER**

This feature indicates boat speed in miles per hour, knots per hour or nautical miles per hour.

### **TRIP METER**

This feature indicates the distance traveled since the meter was last set.

### **DIGITAL TACHOMETER**

#### **OIL LEVEL WARNING LIGHT**

Refer to your engine owner's manual for information regarding oil level and warning light.

#### **REVOLUTIONS PER MINUTE (RPM's)**

Consult your engine Owner's Manual for the recommended operating RPM range.

### **TRIM**

This feature indicates the angle of thrust of the lower unit of the engine.

## **GAUGES AND SWITCHES**

### **DIGITAL FUEL MANAGEMENT GAUGE**

#### **ECONOMIZER**

The economizer feature on the fuel management gauge gives readings in gallons per hour and miles per gallon.

#### **SYNCHRONIZER**

The synchronizer tells the operator when the engines are running at the same RPMs.


#### **TOTALIZER**

The totalizer feature displays the amount of fuel consumed since it was last set. To reset the totalizer press the SET and MODE buttons together.

The digital fuel meter can display information for the port side only, the starboard side only, and then a total consumption. For more detailed information refer to engine Owner's Manual.

### **SWITCH PANEL**

At the helm station you will find an accessory switch panel. These accessory switches are specified below.

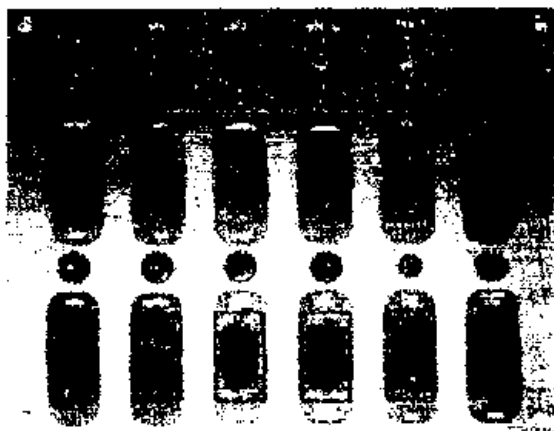

#### **BILGE PUMP**

This two-way switch serves as an overriding manual switch in the event of failure of the automatic switch in the bilge.

#### **COCKPIT LIGHTS**

The cockpit lights provide illumination for the cockpit area.



## **GAUGES AND SWITCHES**

### **FUEL**

This two-position switch (MAIN-AUX) provides separate fuel quantity readings from each tank. This switch only operates the fuel level gauge and does not select the tank in use.

### **HORN**

The horn meets the requirements of the United States Coast Guard's emergency sound signaling device.

### **LIVEWELL**

This switch activates the livewell. Reference the Livewell operation section in Chapter Seven of this manual for information on this feature.

### **WASHDOWN**

This switch pressurizes the washdown system. Reference the Washdown operation section in Chapter Seven for information on this feature.

### **NAVIGATIONAL/ANCHOR LIGHTS**

Your boat is equipped with lights that meet international lighting regulations. The three position switch (NAV-OFF-ANCHOR) changes the lighting configuration to running or anchor lights. Note that this switch also operates the gauge lights.

### **PRIMER PUMP SWITCH**

The primer pumps should be activated at the initial "start-up" time. The "up" position is for the starboard engine and the "down" position is for the port engine.

### **WIPERS**

This switch activates the windshield wipers.

### **ACCESSORY**

Switches, fuses and breakers labeled "ACC" are unused. These components are provided for the addition of non-factory installed accessories.

**Switch identification labels are available  
through your dealer for  
non-factory installed options.**

# GAUGES AND SWITCHES

## LIGHT BULB REPLACEMENT GUIDE

The following chart provides identification of replacement light bulbs for your Grady-White. All of the lights shown may not be used on every model boat. If you have difficulty finding replacement bulbs under the part numbers listed contact your Grady-White dealer for further assistance. Always use the specified replacement bulb. Improper substitution may result in electrical malfunction, insufficient lighting, boat damage or personal injury.

The following are Registered Trademarks: Perko, Attwood, Gem, Ramco, Guest, GE, Sylvania and Phillips.



18" REDUCED GLARE HANDTOP MAST LIGHT  
LIGHT MANF., PERKO  
REPLACEMENT BULB # PERKO 71 DP CLR



 
INTERIOR CABIN LIGHT  
LIGHT MANF., RAMCO  
REPLACEMENT BULB # RAMCO 296 OR  
GE OR SYLVANIA OR PHILLIPS G4



COCKPIT LIGHT  
LIGHT MANF., ATTWOOD  
REPLACEMENT BULB # ATTWOOD 490



STERN POLE LIGHT  
LIGHT MANF., PERKO  
REPLACEMENT BULB # PERKO 337 002 DP



READING LIGHT FOR CABIN  
LIGHT MANF., GEM  
REPLACEMENT BULB # GEM 1831 21CP OR  
GE/SYLVANIA #1142



TOP MOUNT LIGHT (WINDSHIELD)  
LIGHT MANF., PERKO  
REPLACEMENT BULB # PERKO 338 DP2 CLR  
"REDUCE GLARE"



COMBINATION BOWLIGHT  
LIGHT MANF., PERKO  
REPLACEMENT BULB # PERKO 71 DP CLR



DOME LIGHT  
LIGHT MANF., PERKO  
REPLACEMENT BULB # PERKO 337-003 DP



SEPARATE SIDE BOWLIGHTS  
LIGHT MANF., PERKO  
REPLACEMENT BULB # PERKO 71 DP CLR



NIGHT VISION DOME LIGHT  
LIGHT MANF., GUEST  
REPLACEMENT BULB # GUEST 9-13690 OR GE 912




TOP MOUNT LIGHT (CONSOLE GRABRAIL)  
LIGHT MANF., PERKO  
REPLACEMENT BULB # PERKO 338 DP1 CLR



# GAUGES AND SWITCHES

## TYPICAL OUTBOARD SWITCH PANEL WIRING

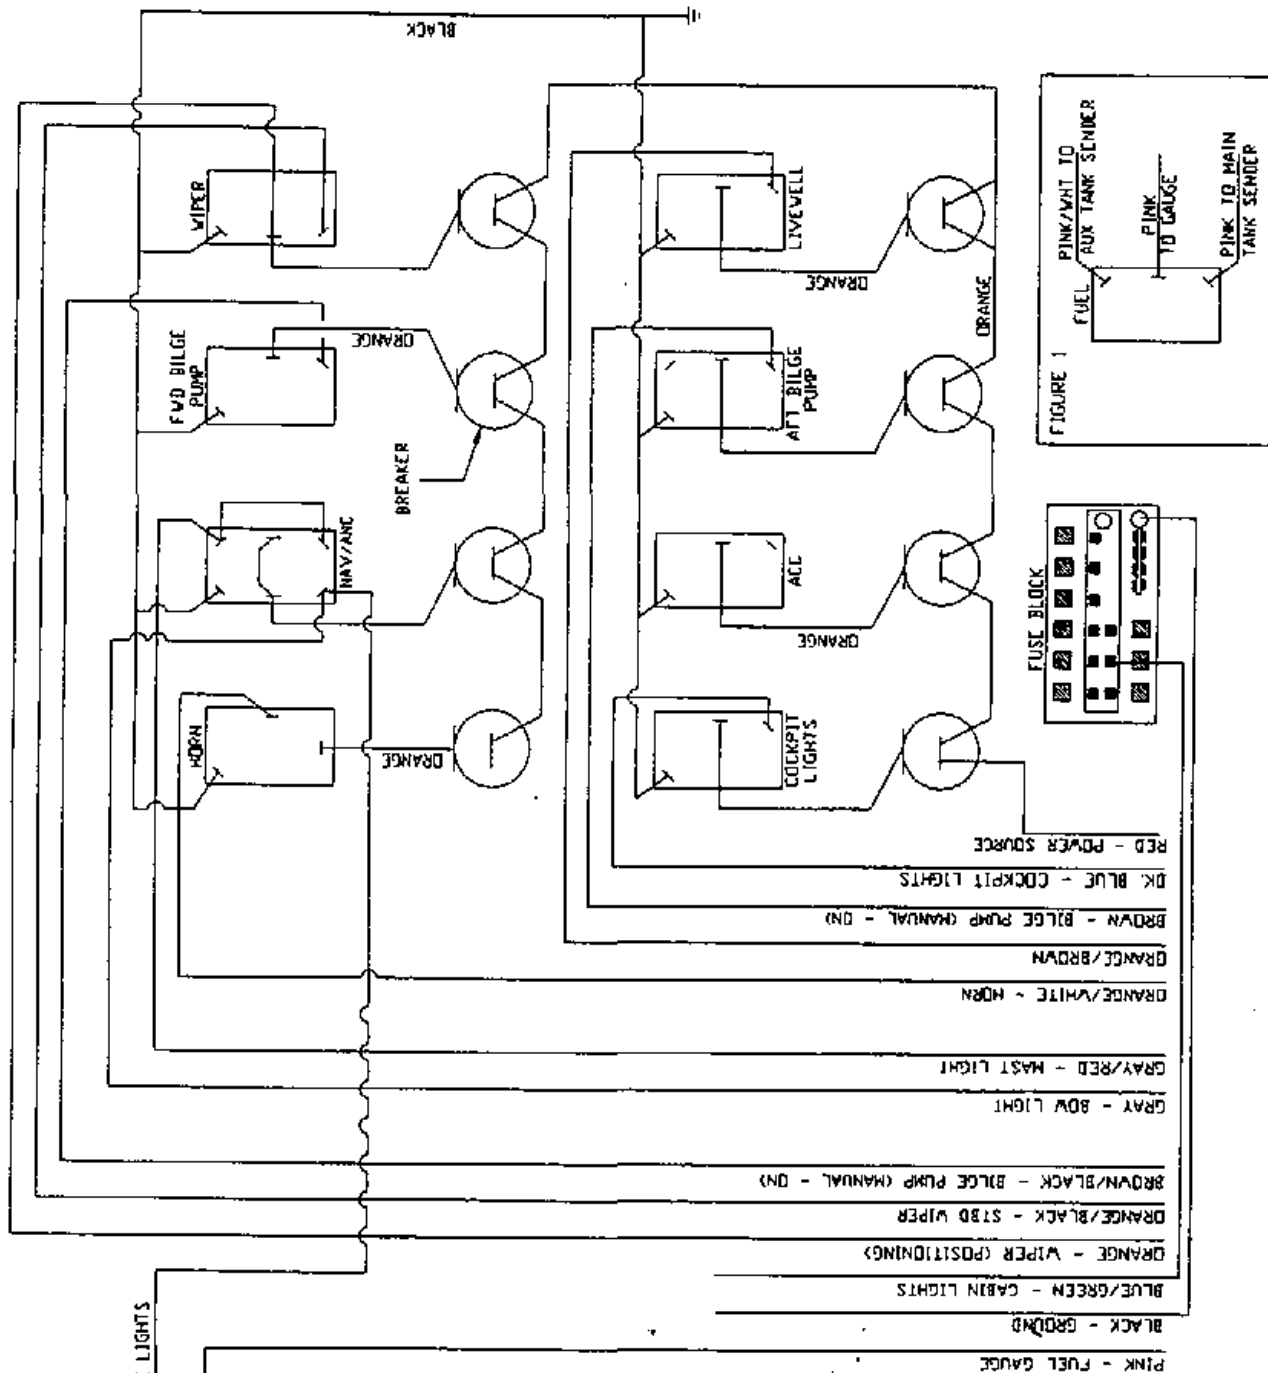

- NOTE:
1. WIRES TERMINATE IN TWO PLUGS THAT GO TO INDIVIDUAL COMPONENTS THROUGH ACCESSORY HARNESSSES
  2. NOT ALL COMPONENT SYSTEMS ARE INSTALLED ON ALL MODELS. DRAWING APPLIES TO ONLY THOSE ITEMS THAT ARE INSTALLED AND CONNECTED. EXTRA WIRES ARE FOR DEALER TO INSTALL OTHER SWITCHES AND ACCESSORIES
  3. INDICATOR LIGHTS ARE INCORPORATED INTO THE SWITCHES WHERE NEEDED
  4. BOATS WITH TWO FUEL TANKS HAVE A THREE POSITION SWITCH FOR SELECTING MAIN OR AUX TANK. WIRING FOR THE SWITCH IS SHOWN IN FIGURE 1

DARK BLUE - GAUGE LIGHTS

## CHAPTER FIVE MAINTENANCE AND SERVICE

### GENERAL

The amount of maintenance required to keep your boat operating properly and to maintain the appearance is dependent on how the boat is used, amount of usage, type of water, geographic location etc..

Your hull and deck are constructed by the hand lay-up method using the highest quality fiberglass mat and woven roving. This method of construction ensures a proper fiberglass-to-resin ratio and uniform thickness, which together result in a much stronger boat than ones constructed of "chopped glass". This process ensures that your Grady-White is the strongest most durable fiberglass boat possible.

The bilge areas should be kept clean and dry. Leaks found early and corrected will less likely cause damage. Do not allow grease and dirt to build up.

Proper maintenance of your boat is not only a source of pride. It is the key to maintaining your boat's value. A few simple steps will keep your fiberglass Grady-White looking showroom bright for years.

### EXTERIOR FIBERGLASS FINISH

The exterior finish of your Grady-White is a thin layer of resin with a finished color pigment called gelcoat. It is used for cosmetic purposes and makes routine maintenance relatively simple. Although gelcoat has a hard smooth surface it does contain microscopic pores that will allow surface discoloration if not kept clean.

### MAINTENANCE

Normal exterior finish maintenance of your Grady-White boat is similar to the care you would give your automobile. Do not use caustic, highly alkaline cleaners or those containing ammonia. These cleaning agents may darken gelcoat. The resulting stain is a chemical reaction and can be removed with a rubbing compound followed by waxing.

### CLEANING

The best way to prevent discoloration and soil build-up is to hose the boat with fresh water after each outing or on a regular basis. This build-up is the result of use and environmental pollutants. Clean the boat regularly with a mild household detergent and plenty of fresh water. Use a sponge on smooth surfaces including the deck and a brush on the nonskid. Rinse away all grime and residue.

### WAXING

Gelcoat can lose its gloss due to constant exposure to the natural environment and pollutants, it will require special attention to restore the original gloss and color. See a local dealer for advice on wax for your boating region. The wax film will seal the pores as well as enhance the looks of your boat. **DO NOT wax surfaces that may be walked on, they will become slippery.** While waxing your boat inspect the surface for any damage. Have the damage corrected as soon as possible.

## MAINTENANCE AND SERVICE

Gelcoat will age or dull naturally. Discolorations are shallow in depth. Factors that will affect the rate of discoloration are: the sun, pollution, old wax accumulation and the salt content of water. Polishing compound (fine abrasive) or rubbing compound (coarse abrasive) is recommended for use on fiberglass finishes to remove scratches, stains or restore severely weathered surfaces. These products can be applied by hand or mechanical means. The process below will help restore fiberglass finishes:

- Clean the affected area with a good detergent.
- Remove stubborn stains or discoloration by gently wet sanding the affected areas with 600 grit "wet or dry" sandpaper. **ALWAYS SAND IN ONE DIRECTION.** Use plenty of water and sand curves in the same direction. Dry the area to make sure all the discoloration has been removed. Repeat this process if necessary.
- Buff using a polishing compound suitable for fiberglass, an electric buffer (1750-1800 RPM) and an 8-inch lamb's wool pad.

### **⚠ CAUTION**

**Keep buffer moving. Do not allow it to rest in one spot.  
Heat build up will quickly distort the surface.**

- When buffing is complete wash away compound with clear water and dry the area.
- Once the area is clean it may be waxed. This will enhance the gloss while providing a seal to retard staining or soil accumulation.

### **⚠ CAUTION**

**Compounding too often or excessive compounding can wear away the gelcoat.**

### REPAIRING

Though gelcoat is a very durable material, it is susceptible to scratches, blistering and web-like cracks (crazing) over time. It is elastic enough, however, to withstand strong blows while flexing with the hull's movement. Gelcoat problems are cosmetic and will not effect the structural integrity of your boat.

Some gelcoat damage and imperfections, such as nicks and scratches can be repaired by obtaining a color match patch kit. This kit can be purchased through your Grady-White dealer. Acetone, the most suitable cleaning agent for gelcoat can also be acquired through your dealer. Instructions are included in the patch kit.

### **⚠ WARNING**

**M.E.K. (Methyl ethyl ketone peroxide), gelcoat and acetone are flammable and hazardous chemicals that must be handled properly. Follow instructions carefully. After the gelcoat is catalyzed it will soon heat up and put off fumes. When finished with catalyzed chemicals or if they start to build up heat, submerge completely in water until cool.**

## MAINTENANCE AND SERVICE

### BOTTOM PAINT

If your boat is left in the water for more than a few days at a time, the hull bottom (below the waterline) should be painted with anti-fouling paint to protect it from marine growth and barnacles that hinder performance. Since anti-fouling paint slowly dissolves to prevent marine growth inspection and cleaning of the boat bottom at least once per season is advisable. Repaint when necessary. To help prevent blistering use an epoxy barrier coat to be applied in conjunction with the anti-fouling paint.

### CANVAS

Although your Grady-White boat's canvas is made using the highest quality vinyl and latest sewing techniques, your boat's canvas will not be completely leak proof. The seam holes in your canvas may stretch and leak. However, you can correct much of this problem by applying paraffin, Apseal® or Uniseal™, to the seams.

Please understand that Grady-White does not warrant the fit and design of the canvas to be entirely watertight.

### MAINTENANCE

To maintain your boat's top and other canvas follow these steps:

Fabric should be cleaned regularly to prevent soil build-up that will become embedded in the fabric. Simply brush off any debris, hose down canvas and clean with a mild solution and warm water. Do not use petroleum or ammonia based cleaners on canvas or clear vinyl, they will cause the canvas to turn yellow. For heavily soiled fabric remove top from frame. Soak the fabric in a solution of 1/2 cup of Clorox and 1/4 cup of Ivory or Lux soap per gallon of warm water. Let canvas soak until mildew and stains can be brushed out with a common kitchen brush. Rinse thoroughly with cold water until all soap is removed. Allow fabric to air dry completely. **To avoid damage to the canvas fabric; DO NOT STEAM PRESS OR DRY IN AN ELECTRIC OR GAS DRYER.**

Water repellent was applied to your canvas during manufacturing. After various cleanings some of the repellent may have been released and retreatment of the fabric is recommended. Do not use wax-based products. Use a water based repellent such as Apseal® or Uniseal™. Scotchguard® is effective for short-term use only.

### SNAPS

- Zippers and snaps will loosen with use. Use care when starting the zipper to prevent damage. Lubricate the snap buttons and zippers with petroleum jelly or paraffin. Fasteners should be unsnapped as close to the button as possible.

Apseal® is a register trademark of Astrup.  
Uniseal™ is a trademark of Unitex – see your local marine supply  
Scotchguard® is a registered trademark of 3M.

## MAINTENANCE AND SERVICE

### VINYL

- Clean clear vinyl thoroughly with denatured alcohol and then apply a protective layer of clear wax. **Do not** use paste wax, it will turn the vinyl yellow. This process should be repeated as necessary to maintain the protective wax coating.
- Store and secure canvas before trailering.
- Dry all canvas before storing to prevent mildew.
- Remove the top, front and side panels; **roll** them up for storage. This procedure is necessary to prevent the front and side vinyl pieces from cracking. **NEVER FOLD THESE PIECES!**

### STORAGE

Consider the following steps when putting your folding top canvas option in the stored position:

- Fold the top and zip it into the canvas cover provided.
- Pivot the covered top into the stowed position on the foredeck. The canvas cover is equipped with a strap on each side and an eyelet in each strap. Place the eyelet over the male fasteners located on the port and starboard foredeck.
- Twist the male fastener 90 degrees to engage.

### **⚠ CAUTION**

**Secure the folded top when in the stowed position to prevent damage or the loss of the canvas.**

### UPHOLSTERY

Your exterior vinyl upholstery may be cleaned with a mild solution of household detergent and fresh water. Commercial cleaners for vinyl also work well.

Since the seams of your exterior upholstery are not waterproof, your upholstery should be stored in the cabin or covered when not in use.

Most cabin cushions are removable and may be dry-cleaned. Some cabin cushions are of a Herculon-type fabric and may be cleaned with upholstery cleaner.

### **⚠ CAUTION**

**DO NOT MACHINE-WASH THE CABIN FABRICS.**

### DURATRIM/POLYETHYLENE/PLEXIGLAS

Duratrim and polyethylene are used for toe rails, trim, cutting boards, lids etc.. Duratrim has an appearance similar to teak but requires almost no maintenance. Maintenance of your duratrim should include regular cleaning with soapy water. Apply a surface protector at least twice per year. Polyethylene can be cleaned with products such as 409 or any spray and wipe cleaner. Plexiglas, used to cover your instruments radio box and also as storage doors, can be maintained by use of a glass cleaner and a soft cloth.



## MAINTENANCE AND SERVICE

### HARDWARE MOUNTING

When drilling holes for mounting hardware in boat surfaces make sure each hole is sealed properly. Sealing will prevent water leakage that is extremely important in fiberglass areas that have been reinforced with plywood. A drilled hole sealed improperly allows water inside the fiberglass this allows the plywood reinforcement to become saturated.

### CAULKING/GASKET

Deck fittings, bow rails, windows, hatches etc., have been caulked or gasketed with the highest quality material to ensure a waterproof joint with the boat. However, the working action of normal use will tend to flex the joint and eventually break down the seal. Periodically inspect the caulking or gaskets for leaks. Recaulk or replace the gaskets when necessary or have your dealer do the repairs.

### STAINLESS STEEL RAILS & HARDWARE

Your hardware is made of laboratory grade 316 stainless steel, and needs regular cleaning to maintain its "less staining" properties. The key to maintaining stainless steel is to keep it clean with a mild solution of soap and fresh water. Remove salt or dirt from your stainless steel on a regular basis.

### REQUIRED MAINTENANCE PROCEDURE FOR ANODIZED ALUMINUM COMPONENTS

Lean Bars, Rod Holders, T-Top and Hardtop Frames, Outriggers, Etc.

Due to the nature of anodized aluminum and the harsh exposure conditions of the marine environment, it is important to follow a required maintenance procedure. Failure to follow a preventative maintenance procedure will most likely result in aluminum pitting.

These parts must be washed periodically with a very mild soap and water solution. **Grady White recommends washing with a mild soap (such as Ivory Liquid) after each use and every two to three weeks if stored in an outside marine environment.** Strong cleaners and soaps must not be used; never use abrasive cleaners or products that contain chlorine bleach. These products can remove the anodized coating.

Give special attention to the upper tubes of a hardtop or T-top frame. The area just below the top is shielded by the canvas or fiberglass top and does not receive the natural rinse that rainwater provides. Failure to thoroughly clean and maintain this area will allow contaminants that attack the anodized aluminum to remain on the frame.

## MAINTENANCE AND SERVICE

For maximum protection coat parts with a non-abrasive metal protector. The best protectors will displace moisture, remove contaminants, and leave a wax film protecting the anodized aluminum. Follow the application guidelines for the product you choose. A sample of one metal protector has been provided with your boat.

### Metal Protectors:

**Boeshield T-9.**  
**PMS Products Inc.**  
76 Veterans Dr. Unit 110  
Holland, MI 49423  
800-962-1732

**Aluma Guard**  
**Rupp Marine, Inc**  
4761 Anchor Ave.  
Port Salerno, FL 34992  
561-286-5300

**Premier Polish**  
**Aquatech**  
6726 Netherlands Drive, Suite 200  
Wilmington, NC 28405  
800-853-7760

### SHOWER SUMP

A shower in the head compartment drains into a contained "sump" which is used to prevent hair, soap, scum and bacteria from accumulating in the bilge and creating odors. This sump should be cleaned regularly. The sump pump box contains a filter. Remove the filter and rinse with water to clean. The filter should always be installed when using the shower to prevent the sump pump from becoming clogged.

### SCUPPERS

Grady-White boats have self-bailing cockpits. This means water on the cockpit floor is drains by gravity through large aft scuppers and **NOT** into the bilge. The aft drains or scuppers have an external flap assembly (as shown below), which restricts the flow of water back into the boat. Inspect the flaps periodically to make sure that they are free of debris. The scupper flaps may need periodic replacement if the rubber becomes damaged or no longer seals properly in the thru-hull.



## MAINTENANCE AND SERVICE

### FUEL SYSTEM MAINTENANCE

To determine whether a fuel flow problem is in your fuel system or your engine, follow this simple method. Connect a six-gallon portable tank to the engine and operate the engine. If the problem persists the likely cause is with the engine itself. If the problem goes away, the source must be in the boats' fuel system. One component that should be inspected if a restriction occurs is the anti-siphon valve. If fuel does not flow properly through this part it must be cleaned and/or replaced. **DO NOT** remove the anti-siphon valve and replace it with a regular barb.

Do not use fuels containing alcohol. Alcohol, particularly methanol, will absorb water that makes fuel more corrosive to metals in tanks and carburetors it also shortens the durability of elastomers such as hose and gaskets.

After fueling, inspect the fuel hoses, connections, and tanks for tightness, signs of leaks, and deterioration. Annually conduct a more detailed inspection of fuel system components, especially those hidden from routine inspection. Replace any fittings, deteriorated hoses, clamps or connections immediately.

### FUEL TANK COMPARTMENT

The fuel compartments need to be rinsed periodically, especially when used in a salt-water environment. Dirt accumulation attracts salt that creates salt crystals. Salt crystals can corrode most metal surfaces if left untreated over a period of time. To help protect your fuel tank from rust and corrosion rinse the compartment with **FRESH** water. Remove the access plates from fuel tank lids and inspect this area for leaks or unsecured lines.

The access plates on your fuel compartment lid seals this area. Over time the opening and closing of these plates cause the o-rings to wear-out. Replace these o-rings as necessary to maintain the watertight integrity of the plates.

## MAINTENANCE AND SERVICE


### BATTERIES

Despite the type of batteries your engines require they are extremely important. They should be secured in a non-metallic tray to avoid electrolyte spills and an insulated boot should cover battery terminals. Fluid levels should be checked at least once a month. Fill the battery to the upper level with distilled water. **Never** overfill the battery.

Keep terminals clean by scrubbing them with a stiff brush and a mixture of baking soda and water. Afterwards, apply a light coat of grease. The mixture should not enter the battery. When the batteries are not in use check them each month by using a battery hydrometer that measures the specific gravity.

### **⚠ CAUTION**

**Never disconnect the batteries when the engines are running. This can cause damage to the charging system. When replacing your battery, reference your engine Owner's Manual for recommended battery type and required performance specifications.**

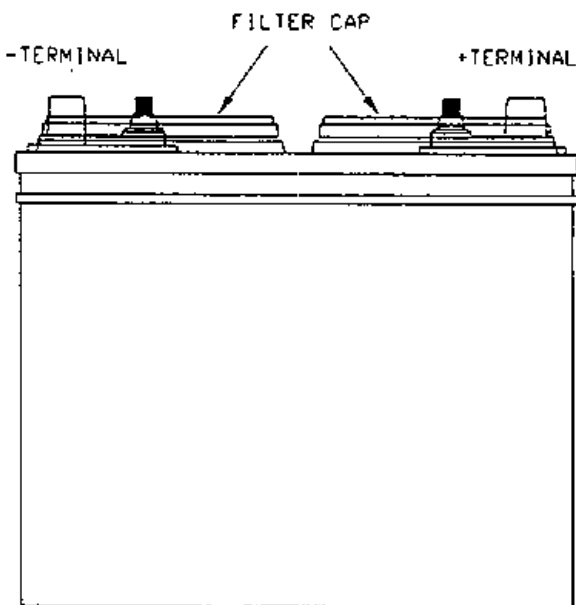

**A battery contains sulfuric acid. Avoid contact with skin, eyes or clothing.**

**Antidote:**

**EXTERNAL - Flush with water.**

**INTERNAL - Drink large quantities of water or milk. Follow with milk of magnesia, a beaten egg or vegetable oil. Contact a physician immediately.**

**EYES: Flush constantly with water and get prompt medical attention.**

**SHIELD EYES WHEN WORKING NEAR BATTERIES.**

**Batteries produce explosive gases. Keep sparks, flame and cigarettes away. Ventilate when charging or using in an enclosed space.**

### KEEP OUT OF REACH OF CHILDREN

### **⚠ CAUTION**

**When disconnecting and reconnecting battery cables, the black cable must be connected to the negative terminal and the red cable must be connected to the positive terminal. Reversing this procedure will immediately damage your system.**

## CHAPTER SIX WINTERIZATION AND STORAGE

### GENERAL

Boats stored during the winter or for an extended period of time require some routine maintenance. Prior to and during the storage process the boat and its systems should be checked for maintenance and repairs. Arrange repairs during the storage period.

Avoid costly damage and delay when launching your boat by having it stored and winterized properly. This information is presented as a general guide and the actual storage should be performed by a professional and qualified dealership.

### BOAT STORAGE

To avoid personal injury and property damage it is advised to take extra precautions when lifting or moving the boat for storage. Grady-White Boats are equipped with stern lifting eyes and a bow towing eye. These eyes are provided for moving and temporary lifting. For permanent lifting, you will need to have or add a bow lifting ring option. Eyes should be inspected regularly to insure structural integrity.

#### **⚠ WARNING**

**THE BOAT SHOULD NOT BE STORED BY USING THE PAD EYES, UNLESS THE BOAT IS EQUIPPED WITH A BOW LIFTING RING. PAD EYES SHOULD BE INSPECTED PERIODICALLY IF USED FOR LIFTING.**

While transporting a boat by lift or tow motor the structure should remain as close to ground level as possible. If slings are necessary for lifting or transporting they should be in proper condition and tied together to prevent any movement (separating or slipping) which could cause damage to the boat. If tow motors are used to move the boat the forks should be padded and in a secure location under the hull near the chine. The forks should be long enough to prevent the boat from rocking forward and aft causing it to become unbalanced.

#### **⚠ WARNING**

**THE 300 MARLIN SHOULD NOT BE LIFTED BY THE PAD EYES. TO LIFT THIS MODEL USE SLINGS.**

Other conditions that should be considered before hauling, transporting or storing your boat include overhead lines ground conditions (frozen or soft) and storm conditions that may arise.

When storing your boat on the trailer raise and block the trailer axle to prevent tire deterioration. This is an excellent time to lubricate and pack the wheel bearings per the manufacturer's instructions.

## WINTERIZATION AND STORAGE

Make sure the keel, chine and transom are fully supported. Indoor storage is beneficial particularly if your climate produces freezing weather. The storage unit should not be airtight but should be ventilated. Ventilation is extremely important both around and through the boat.

For outdoor storage a canvas cover should be used to prevent "sweating". One method is to build a frame over the boat to support the canvas. It should be a few inches wider than the boat so the canvas will clear the rails and allow passage of air. The cover should be fastened securely so that winds cannot remove it or cause it to chafe the boat. A poor covering job will eventually cost more than the price of a well-made cover.

### **⚠ WARNING**

**IF THE BOAT IS SHRINK WRAPPED WITH PLASTIC DURING STORAGE, THE FUEL FILL AND VENT FITTING MUST BE OUTSIDE OF THE ENCLOSURE TO PREVENT THE TRAPPING OF DANGEROUS FUMES OR SPILLAGE FROM THERMAL EXPANSION.**

### **CLEANING AND LUBRICATING THE BOAT**

Clean and wax the boat before storage. If your boat stays in the water there may be a layer of growth on the bottom. As it dries, this debris will harden. Clean, scrub, and scrape the bottom promptly when the boat is removed from the water. Thoroughly remove all marine growth and other foreign matter from the hull. Clean the inside of hull openings, thru hull fittings and scupper drains. Inspect the hull bottom for damage.

Check cleats and rails for corrosion and tightness. Clean all stainless steel as directed under MAINTENANCE. Use a good quality metal preservative like T-9® on all metal surfaces to prevent salt water damage. Check all hinges for corrosion. Lubricate hinges as necessary. Check for loose silicone, hinges, and unseated gaskets. Replace or tighten where necessary. Heavy seas pounding and twisting the hull can cause leaks in your windows, doors and hatches.

### **DRAINING AND WATER SYSTEMS**

Remove the garboard drain plug and open all valves and seacocks to keep the bilge dry. Store your boat with the bow elevated for drainage.

Drain all water tanks, lines and pumps to prevent freeze damage. The fresh water system may be drained by running any faucet until the tank is empty. When empty, turn the faucet off to prevent pump damage. Residual water will not damage the tank. If desired, the fresh water system may have a non-toxic antifreeze added. This antifreeze can be purchased at marine or camping dealerships.

To drain other lines, close seacocks and run the pumps until the lines are dry. After lines are dry open the seacocks. In warmer climates draining will help prevent water stagnation.

# WINTERIZATION AND STORAGE

## HEAD SYSTEM

Empty upper tank and holding tank and make sure all water is cleared. Reference Owner's Packet for manufacturer's information on winterization. Water should be removed from deck pump-out lines.

## FUEL SYSTEM

The compartments that house the fuel tank(s) should be rinsed with fresh water to keep salt crystals from forming and corroding the fuel tanks. After rinsing, make sure all water is drained from the compartments.

Do not use fuel that contains alcohol by reason of it absorbing humidity. The resulting condensation will separate from the fuel as winter temperatures drop. An accumulation of this condensation can lead to corrosion. There are fuel additives available to inhibit condensation. Keep tanks full but do not overfill.

This is also a good time to have your fuel filters/water separators replaced.

## BATTERIES

Check the electrolyte level in your batteries and fully charge the batteries before storing. A weak battery loses its charge more rapidly than a strong battery. Ideally, you should disconnect the batteries and cover the terminals with grease to prevent corrosion.

When replacing batteries in the boat remove excess grease from terminals and charge as necessary before reinstalling.

## ENGINES

Check your engine Owner's Manual regarding the procedures for winterizing the engines. Follow these important instructions carefully, and your engines should survive most weather conditions. Change all filters. Check hoses and clamps. If you have any vibrations during the season look for loose engine bolts, bent shafts or bent propellers.

## STORAGE CHECKLIST

In addition to the winterization guidelines, the following checklist can be used as a guide for storing your boat. Additional details should be added as needed for your personal application.

- Remove all loose items and personal effects.
- Remove any detachable and valuable equipment such as electronics. Store electronics inside. A built-in compass should be covered. Ultraviolet rays from the sun will "cloud" the compass and make it difficult to read.
- All equipment should be winterized as directed in the manufacturer's manuals.
- Store cushions indoors to prevent mildew.
- Clean the exterior and interior of the boat. Remove all grease, oil, salt spray etc..
- Remove all garbage. Clean the refrigerator, cabinets, lockers/storage, fishboxes and livewells. The lids and doors should be propped open for ventilation.
- Empty toilet and holding tank. Flush with fresh water.

## **WINTERIZATION AND STORAGE**

- Lubricate all hinges, valves, the backs of electrical panels and other surfaces that may rust.
- Check underwater items. Hardware should be in good condition and tight.
- Inspect electrical systems and have any repairs performed.

### **GETTING BOAT OUT AFTER STORAGE**

Before placing boat in the water for the boating season, have hull bottom sanded and reapply anti-fouling bottom paint, if necessary. Leave as much equipment and personal effects off the boat until after launch and final check.

### **PRIOR TO LAUNCHING**

Start your own personalized list of items to check and perform prior to placing your boat in the water. The following list will give you some ideas and suggestions.

- Check all gear and replace if necessary.
- Check thru hull fittings for cleanliness, damage and tightness.
- Check prop installation and tightness.
- Clean battery terminal posts with a wire brush or bronze wool. Install batteries, attach cables and tighten. Apply grease to post to exclude air and acid. Check all wire connections for contact corrosion and tightness.
- Check hull valves for easy operation and for condition of hose.
- Check operation of bilge pumps in manual and automatic modes. Check shower sump pump. Check operation of all DC circuits if applicable.
- Check the hose and lines on the fresh water system, install drain plug and close drain valves.

### **AFTER LAUNCHING**

- With the boat in the water check all sources of possible leaks stem to stern.
- Fill fuel system and thoroughly check out fuel system including lines, fittings, connections, valves and filters for leaks.
- Perform maintenance on engines according to the manufacturer's manuals prior to returning them to service.
- Check all engine and steering control cables and linkage for operation. Lubricate cables and linkage as necessary.
- Fill fresh water system and check for leaks.
- Connect to shore power. Check out all electrical equipment, lights, hot water heater, air conditioning system etc., these are optional on some models and may not apply to your boat.
- Check operation of toilet (reference manufacturer's manual).
- Check safety equipment including flares, fire extinguisher and first aid kits. Replace items as necessary.
- Test run engines and generator (if installed) as directed in manufacturer's manual.



# CHAPTER SIX

## 265 EXPRESS

### TABLE OF CONTENTS

---

<b>SPECIFICATIONS/OPTIONAL FEATURES.....</b>	<b>6-2</b>
<b>OPERATION OF STANDARD FEATURES</b>	
<b>Instrumentation And Switches</b>	
Instrument Panel.....	6-3
Switch Panel.....	6-4
<b>Auxiliary Fuse Panel.....</b>	<b>6-5</b>
<b>Main Circuit Breaker.....</b>	<b>6-5</b>
<b>Accessory Outlet - 12 volt.....</b>	<b>6-5</b>
<b>Light Bulb Replacement Guide.....</b>	<b>6-6</b>
<b>Accessory Wiring Color Code And</b>	
<b>Fuse/Breaker Size.....</b>	<b>6-7</b>
<b>Typical Outboard Switch Panel Wiring.....</b>	<b>6-8</b>
<b>Rigging Compartment.....</b>	<b>6-9</b>
<b>Bilge Pump/Float Switch.....</b>	<b>6-9</b>
Bilge Pump Location.....	6-9
<b>Trim Tabs.....</b>	<b>6-10</b>
Trim Tab Pump Location.....	6-10
<b>Cockpit Shower.....</b>	<b>6-11</b>
<b>Washdown Operation.....</b>	<b>6-11</b>
<b>Seacocks.....</b>	<b>6-11</b>
<b>Livewell - Raw Water.....</b>	<b>6-12</b>
<b>Head Operation Instructions</b>	
Hand Pump Marine Head.....	6-12
Marine Electric Head.....	6-13
Emptying Marine Head.....	6-13
<b>OPERATION OF OPTIONAL FEATURES</b>	
<b>Compass.....</b>	<b>6-14</b>
<b>Outriggers.....</b>	<b>6-14</b>
Advantages.....	6-14
Instructions.....	6-14
Care and Maintenance.....	6-14
<b>Dockside Power.....</b>	<b>6-15</b>
Connecting The Dockside Power.....	6-15
Disconnecting The Dockside Power.....	6-15
<b>AC/DC Panel.....</b>	<b>6-16</b>
AC Powered Auxiliary Switches.....	6-16
DC Powered Auxiliary Switches.....	6-17
<b>Battery Charger.....</b>	<b>6-18</b>
<b>Microwave.....</b>	<b>6-18</b>
<b>Water Heater.....</b>	<b>6-18</b>
<b>Battery Select Switch.....</b>	<b>6-18</b>
<b>DIAGRAMS</b>	
<b>AC/DC Panel Wiring.....</b>	<b>6-19</b>
<b>Access Plate and Rigging Tube Location.....</b>	<b>6-20</b>
<b>Accessory Wiring.....</b>	<b>6-21</b>
<b>Battery Select Switch.....</b>	<b>6-22</b>
<b>Dockside Wiring.....</b>	<b>6-23</b>
<b>Hardtop Wiring.....</b>	<b>6-24</b>
<b>Head Layout - Marine.....</b>	<b>6-25</b>
<b>Labels and Location.....</b>	<b>6-26</b>
<b>Livewell/Washdown System.....</b>	<b>6-27</b>
<b>Pressurized Fresh Water System.....</b>	<b>6-28</b>
<b>Thru Hull Detail.....</b>	<b>6-29</b>

## 265 EXPRESS

### SPECIFICATIONS

BEAM-AMIDSHIP.....	9' 7"
BRIDGE CLEARANCE.....	7'
BRIDGE CLEARANCE W/HARDTOP.....	10' 1"
KEEL TO TOP OF WINDSHIELD BAR.....	8' 7"
CENTERLINE LENGTH.....	25' 9"
FRESH WATER CAPACITY.....	20 GALLONS
FUEL CAPACITY - AUX.....	120 GALLONS
FUEL CAPACITY - MAIN.....	130 GALLONS
HULL DRAFT.....	1' 3"
MAXIMUM HP.....	500 HP
ENGINE SHAFT LENGTH.....	DUAL 25"
TRANSOM WIDTH.....	8' 8"
DRY WEIGHT.....	5390 LBS
STEERING TYPE.....	HYDRAULIC
CONTROL CABLE LENGTH.....	PORT - 24' STBD - 22'

### OPTIONAL FEATURE LIST

#### ACCESSORIES

- Anchor windlass
- Battery charger
- Boat lifting bracket
- Dockside power w/galvanic isolator
- Hardtop w/radio box & spreader lights
- Hardtop rod holders
- Head - marine w/electric flush
- Microwave
- Outrigger kit - 18 ft. Lee Jr. cabin side mounted
- Stereo/CD system
- Swim platform w/ladder
- Water Heater - 110V (requires dockside power)

#### CANVAS

- Hardtop drop curtains
- Hardtop Front & Side Curtains
- Helm station cover

## 265 EXPRESS

### OPERATION OF STANDARD FEATURES

#### INSTRUMENTATION AND SWITCHES

Grady White installs full instrumentation on pre-rig boats. The instruments are electrically connected to the ignition key. To operate instruments the ignition switch should be in the "on" position. See Instruments in *Sportfish, Cruisers, Yachts Owner's Manual*.

#### INSTRUMENT PANEL

Not all boats are equipped with the same type of instrumentation. Consult your dealer for specific information on the type of instrumentation included on your boat.

##### FUEL GAUGE

The fuel gauge indicates the fuel level. When reading this gauge remember...

- the accuracy varies with the attitude of your boat in the water (trim or list).
- the fuel pickup tube is not capable of withdrawing all of the fuel from the tank. **Never operate your boat at very low fuel levels.**

##### OIL LEVEL GAUGE

This gauge indicates the quantity of oil in the oil tank.

##### TACHOMETER GAUGE

The tachometer indicates engine revolutions per minute (RPMs). Consult engine manual for the recommended operating RPM ranges.

##### TRIM GAUGE

The trim gauge indicates the angle of thrust of the lower unit of the engine.

##### VOLTMETER

The voltmeter indicates the battery charge with the engine off and the charging system output with the engine running. A reading of 12 or 13 volts with the engine off is normal denoting a fully charged battery. Readings below 11 imply a weak battery and may not start the engine(s). A reading of 13-15 volts while an engine is running is normal. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may imply loose connections or trouble in the regulator and alternator circuit. A voltage drop soon after the engine is shut down indicates a bad battery or a heavy load on the electrical system.

##### WATER PRESSURE GAUGE

The water pressure gauge indicates the water pressure in the engine cooling system. Readings help determine if water pressure is too low for adequate cooling. Consult the engine manual for a recommended operating range

##### WATER TEMPERATURE GAUGE

The water temperature gauge indicates the temperature of the cooling water circulating through your engine. If temperatures exceed the recommended operating range immediately shut off your engine to prevent damage. Overheating is often caused by obstruction of your engine's water intake on the lower unit. Check the water intake strainer first if you experience trouble.

## 265 EXPRESS

### WATER TEMPERATURE, OIL LEVEL AND FUEL RESTRICTION WARNING SYSTEM

Outboard engines have several warning systems. The buzzer for these systems is located under the dash. Some models also have indicator lights in addition to the audible alarm. Consult your engine manual for location and functions of these systems.

### SWITCH PANEL

At the helm station you will find an accessory switch panel. Not all boats are equipped with the same accessories. Consult your dealer for information or questions regarding the accessories included on your boat.

#### BILGE PUMP

This two-way switch serves as an overriding manual switch in the event of failure of the automatic switch in the bilge.

#### COCKPIT LIGHTS

The cockpit lights provide illumination in the cockpit area.

#### FUEL

Boats with dual tanks have a two-position switch (MAIN-AUX) which allows separate fuel quantity readings from each tank. This switch only operates the fuel level gauge and **does not select the tank**. See FUEL SELECT VALVE in Chapter 2 for selecting or changing the tanks.

#### HORN

The horn meets the requirements of the USCG sounding device.

#### LIVEWELL

This switch activates the livewell system.

#### NAVIGATIONAL/ANCHOR LIGHTS

The three-position switch (NAV-OFF-ANC) changes the lighting configuration.

#### TRIM/TILT

The trim/tilt switch is located on the throttle control. Trim changes the angle of thrust of the engine (see Trim in Chapter 3). Tilt raises the engine for trailering.

#### WASHDOWN

This switch activates the washdown system.

#### WATER PRESSURE

This switch activates the pressurized fresh water system.

#### WINDSHIELD WIPERS

This switch powers the windshield wipers.

## 265 EXPRESS

### ACCESSORY


Switches and breakers labeled "ACC" are blank. Both are used for non-factory installed accessories. See ACCESSORY WIRING COLOR CODE AND FUSE/BREAKER SIZE CHART on page 6-7 for recommended breaker amperages. Switch labels are available from your dealer for non-factory installed options.

#### NOTICE

**Use an anti-corrosion spray on the back of panels and on exposed wires to prevent the rust or corrosion that could lead to an electrical system failure.**

### AUXILIARY FUSE PANEL

The auxiliary fuse panel located under the dash offers the ability to install electronics in addition to the accessory switches located in the dash. Your model utilizes the automotive type fuse.

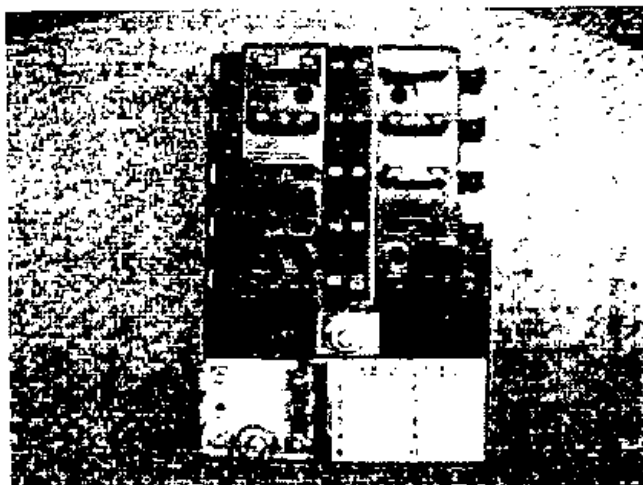

### MAIN CIRCUIT BREAKER

There is a 40 AMP circuit breaker located on the transom in the starboard aft battery compartment. This breaker is the main protection for the wiring supplying power to the accessory switch panel. If this breaker is tripped, depressing the red button on the breaker box will reset it.

### ACCESSORY OUTLET - 12 VOLT

A 12-volt outlet installed at the helm provides an easily accessible power supply for accessories such as cellular phones and spotlights.

#### NOTICE

**The accessory outlet cannot be used with a cigarette lighter.**

## 265 EXPRESS

### LIGHT BULB REPLACEMENT GUIDE

The following chart provides identification of replacement light bulbs for your Grady-White. All of the lights shown may not be used on every model boat. If you have difficulty finding replacement bulbs under the part numbers listed contact your Grady-White dealer for further assistance. Always use the specified replacement bulb. Improper substitution may result in electrical malfunction, insufficient lighting, boat damage or personal injury.

The following are Registered Trademarks: Perko, Attwood, Gem, Ramco, Guest, GE, Sylvania and Phillips.



18" REDUCED GLARE HARDTOP MAST LIGHT  
LIGHT MANF.: PERKO  
REPLACEMENT BULB #: PERKO 71 DP CLR



 
INTERIOR CABIN LIGHT  
LIGHT MANF.: RAMCO  
REPLACEMENT BULB #: RAMCO 286 DR  
GE OR SYLVANIA DR PHILLIPS G4



COCKPIT LIGHT  
LIGHT MANF.: ATTWOOD  
REPLACEMENT BULB #: ATTWOOD #90



STERN POLE LIGHT  
LIGHT MANF.: PERKO  
REPLACEMENT BULB #: PERKO 337 012 DP



READING LIGHT FOR CABIN  
LIGHT MANF.: GEM  
REPLACEMENT BULB #: GEM 1831 21CP OR  
GE/SYLVANIA #1142



TOP MOUNT LIGHT (WINDSHIELD)  
LIGHT MANF.: PERKO  
REPLACEMENT BULB #: PERKO 338 DP2 CLR  
"REDUCE GLARE"



COMBINATION BOWLIGHT  
LIGHT MANF.: PERKO  
REPLACEMENT BULB #: PERKO 71 DP CLR



 
DOME LIGHT  
LIGHT MANF.: PERKO  
REPLACEMENT BULB #: PERKO 337-013 DP



SEPARATE SIDE BOWLIGHTS  
LIGHT MANF.: PERKO  
REPLACEMENT BULB #: PERKO 72 DP CLR



NIGHT VISION DOME LIGHT  
LIGHT MANF.: GUEST  
REPLACEMENT BULB #: GUEST P-13650 DR GE 912



TOP MOUNT LIGHT (CONSOLE GRABRAIL)  
LIGHT MANF.: PERKO  
REPLACEMENT BULB #: PERKO 338 DP1 CLR


## 265 EXPRESS

### ACCESSORY WIRING COLOR CODE AND FUSE/BREAKER SIZE CHART (ALL PARTS BELOW ARE NOT AVAILABLE ON ALL MODELS)

ACCESSORY	WIRE SIZE AND COLOR	AMPERAGE	LOCATION
<b>LIGHTS</b>			
BOW LIGHT	16 GA. GRAY	15.0	ACCESSORY PANEL
AFT POLE LIGHT	16 GA GRAY/WHITE	15.0	ACCESSORY PANEL
MAST LIGHT	16 GA GRAY/RED	15.0	ACCESSORY PANEL
PANEL LIGHTS	16 GA DARK BLUE	15.0	ACCESSORY PANEL
CABIN LIGHTS	16 GA DARK BLUE/GREEN	10.0	FUSE BLOCK
COCKPIT LIGHTS	16 GA DARK BLUE	10.0	ACCESSORY PANEL
SPREADER LIGHTS	14 GA DARK BLUE/WHITE	10.0	ACCESSORY PANEL
<b>PUMPS</b>			
BILGE PUMP (FORWARD):			
RULE 1100	16 GA BROWN/BLACK	5.0	ACCESSORY PANEL
RULE 1500	16 GA BROWN/BLACK	7.5	ACCESSORY PANEL
AUTO FLOAT SWITCH (FORWARD)	16 GA BROWN/RED	5.0/7.5	NEAR BATTERY
BILGE PUMP (AFT):			
RULE 1100	16 GA BROWN	5.0	ACCESSORY PANEL
RULE 1500	16 GA BROWN	7.5	ACCESSORY PANEL
AUTO FLOAT SWITCH (AFT)	16 GA BROWN/WHITE	5.0/7.5	NEAR BATTERY
AERATOR PUMP			
16 GA ORANGE/2BROWN		2.0	ACCESSORY PANEL
SHOWER SUMP PUMP (FLOAT SWITCH)	16 GA BROWN/ORANGE	4.0	FUSE BLOCK
WATER PRESSURE PUMP (CABIN SHOWER)	12 GA ORANGE/RED	15.0	ACCESSORY PANEL
WATER PRESSURE PUMP	16 GA ORANGE/BLUE	5.0	FUSE BLOCK
WASHDOWN PUMP	12 GA ORANGE/BROWN	15.0	ACCESSORY PANEL
LIVWELL PUMP	16 GA ORANGE/BROWN	5.0	ACCESSORY PANEL
IN-LINE MACERATOR PUMP	12 GA ORANGE/GRAY	20.0	ACCESSORY PANEL
PRIMER PUMPS (PORT)	16 GA PINK/RED	5.0	ACCESSORY PANEL
(STARBOARD)	16 GA PINK/BLUE	5.0	ACCESSORY PANEL
<b>MISCELLANEOUS</b>			
HORN	12 GA ORANGE/WHITE	15.0	ACCESSORY PANEL
WINDSHIELD WIPER (ACTUATOR):			
PORT	16 GA ORANGE/GREEN	5.0	ACCESSORY PANEL
STARBOARD	16 GA ORANGE/BLACK	5.0	ACCESSORY PANEL
WINDSHIELD WIPER (POSITION)	16 GA ORANGE		
ACCESSORY	16 GA ORANGE	10.0	ACCESSORY PANEL
ACCESSORY GROUNDS	16 GA BLACK	N/A	
ACCESSORY GROUNDS MAINS	10 GA BLACK	N/A	
HYDRAULIC TRIM TABS	16 GA HARNESS (SUPPLIED)	20.0	FUSE BLOCK
MAIN FUEL TANK (SENDER)	16 GA PINK	N/A	ACCESSORY PANEL
AUXILIARY FUEL TANK (SENDER)	16 GA PINK/WHITE	N/A	ACCESSORY PANEL
ACCESSORY PANEL POWER LEAD	10 GA RED CIRCUIT BREAKER	40.0	NEAR BATTERY
VHF (HARDTOP RADIO BOX) POWER LEAD	10 GA RED/WHITE IN LINE	20.0	NEAR BATTERY
12 VOLT ACCESSORY OUTLET	12 GA RED/ORG	15.0	FUSE BLOCK
MEMORY WIRE	16 GA RED/PINK	2.0	NEAR BATTERY
CO MONITOR	16 GA RED/BLACK	1.0	NEAR BATTERY
OIL SENDER (STBD)	16 GA LT. BLUE	N/A	
OIL SENDER (PORT)	16 GA LT. BLUE/WHITE	N/A	
FUEL GROUNDS	16 GA GREEN	N/A	
VHF GROUND	10 GA BLACK/WHITE	N/A	

# 265 EXPRESS

## TYPICAL OUTBOARD SWITCH PANEL WIRING

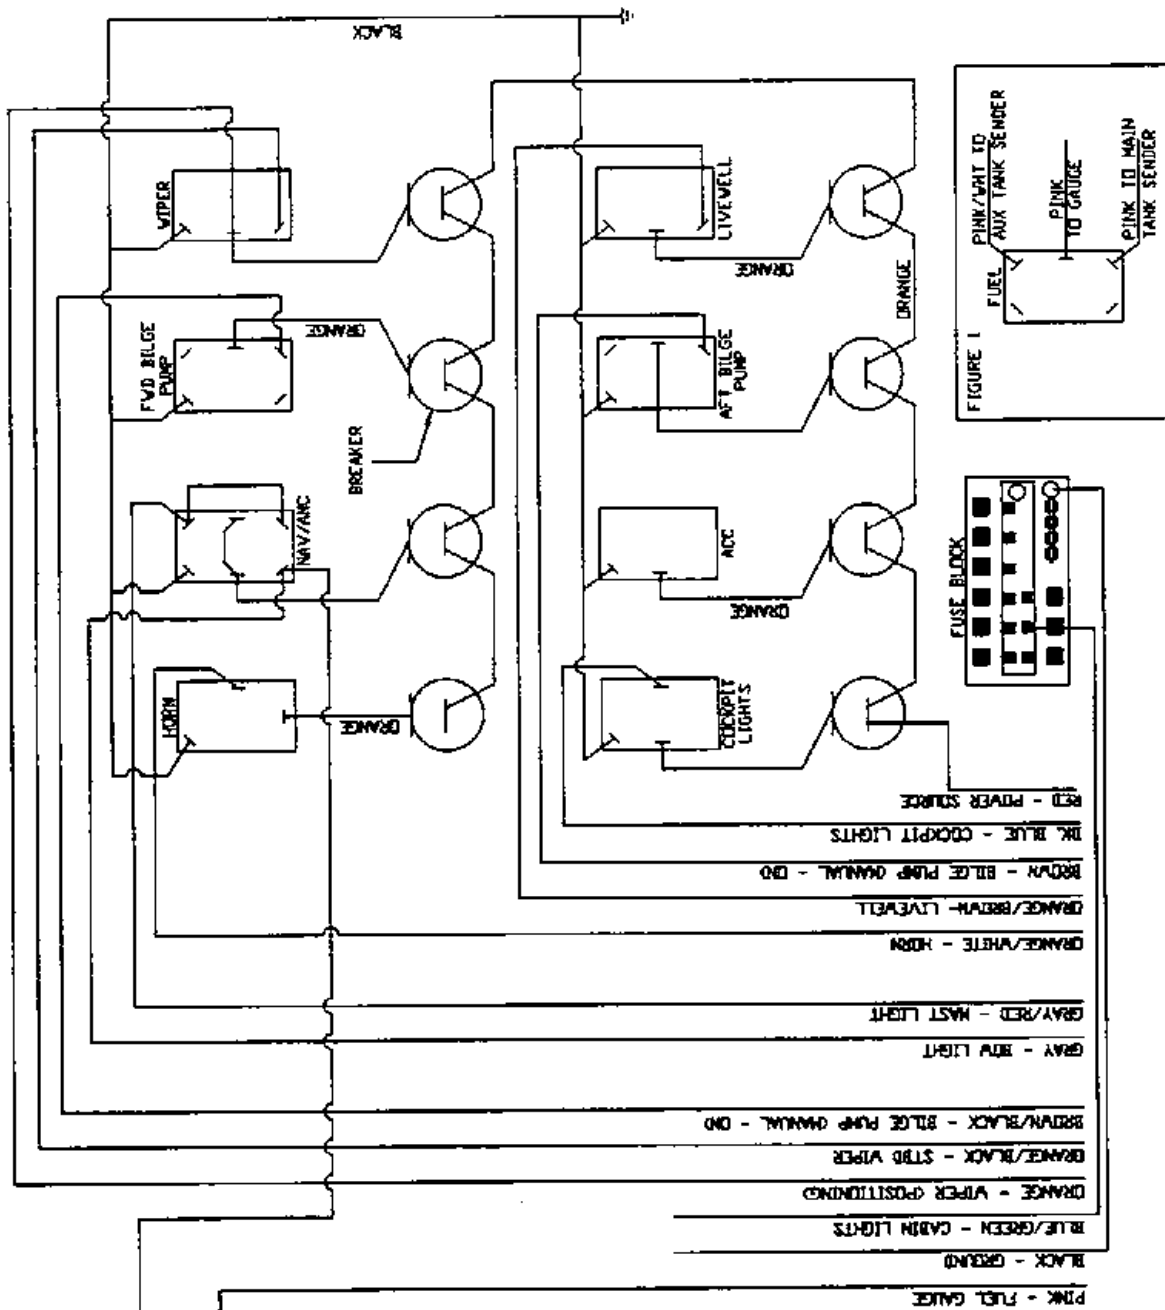

- NOTE:**
1. WIRES TERMINATE IN TWO PLUGS THAT GO TO INDIVIDUAL COMPONENTS THROUGH HARNESSSES
  2. NOT ALL COMPONENT SYSTEMS ARE INSTALLED ON ALL MODELS. DRAWING APPLIES TO ONLY THOSE ITEMS THAT ARE INSTALLED AND CONNECTED. EXTRA WIRES ARE FOR DEALER TO INSTALL OTHER SWITCHES AND ACCESSORIES
  3. INDICATOR LIGHTS ARE INCORPORATED INTO THE SWITCHES WHERE NEEDED
  4. BOATS WITH TWO FUEL TANKS HAVE A THREE POSITION SWITCH FOR SELECTING MAIN OR AUX TANK. WIRING FOR THE SWITCH IS SHOWN IN FIGURE 1



## 265 EXPRESS

### RIGGING COMPARTMENT

The rigging compartment is located under the small rigging lid in front of the motorwell. The livewell, washdown, and aft bilge pumps are accessible in this compartment.

#### NOTICE

The rigging hatch and mounting screws must be sealed with silicone sealer after rigging is complete. If the lid is removed it must be resealed to insure watertight integrity.

### BILGE PUMP/FLOAT SWITCH

Your boat is equipped with automatic float switches adjacent to the bilge pumps. A float switch will enable the bilge pump to come on automatically if a significant amount of water accumulates in the bilge. This switch is wired directly to the batteries. They function independently of the battery select switches and can activate the bilge pump with the battery select switches in the "off" position. The batteries should be inspected frequently to ensure proper operation. The bilge pumps are also equipped with switches at the helm. When a switch is in the MANUAL position, the pump will run continuously. When a switch is in the stand by position the pump is off unless activated by the float switch.

#### CAUTION

**Do not run the bilge pump dry for a prolonged period of time.**


### BILGE PUMP LOCATION

Your 265 has two bilge pumps. One is located in the aft bilge under the access plates in the motorwell, and the other is in the cabin under the sole floor. This pump can be reached through the access plate in the cabin floor.


## 265 EXPRESS

### TRIM TABS

Trim tabs are electrically and hydraulically operated and are used to regulate the attitude of the boat while moving. They may also be used to adjust the boat's running angle in adverse seas or to compensate for unusual load conditions.

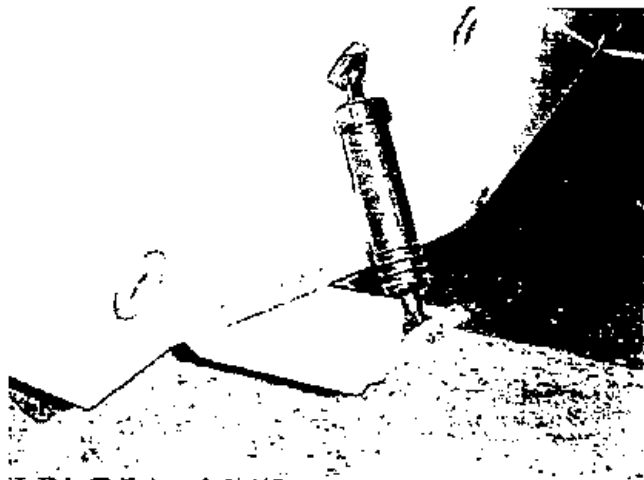

**TRIM TAB**

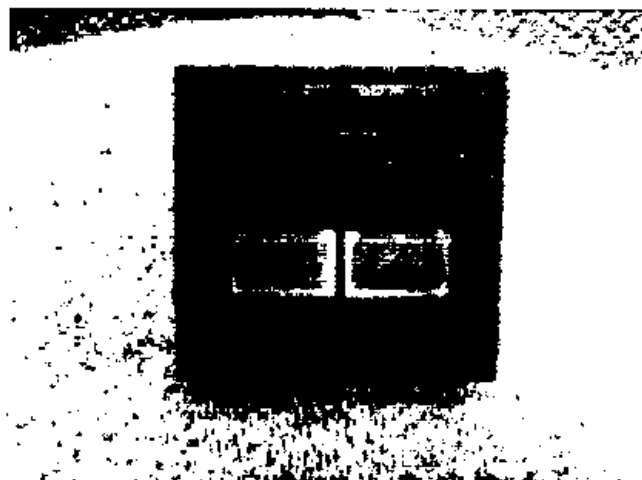

**TRIM TAB SWITCH**

The trim tabs are operated by a two-rocker switch and will aid in trimming the boat fore and aft for a smoother ride. Trim tabs in the extreme "bow up" positions will have no effect on the boat's ride.

Trim tabs can improve the ride of your boat by adjusting where the water is hitting the keel line. In a slight chop the waves may be hitting the keel of your boat around the helm area causing an uncomfortable ride. By adjusting the trim tabs and lowering the bow the waves will hit the keel at a more forward point softening the ride. Experimenting with trim tabs in various sea conditions will help you determine the best position under different load conditions.

Trim tabs are also useful in correcting a port or starboard running list. If the boat is listing to the port side press the starboard trim tab switch toward "bow down". Press the port trim tab switch toward "bow down" to correct a starboard list. This will lower the bow by pulling the higher side to a level position. If your bow is already in a low position you may correct a listing condition by pressing the trim tab switch toward "bow up". This will cause the low side to rise and level the boat, improving the running angle.

Trim tabs in the extreme "bow down" position will cause the boat to come on plane with minimum bow rise. Unless you are operating at low speeds or with considerable cockpit weight you will likely want to raise the tabs slightly when underway in order to avoid "plowing" water. With the tabs in the "bow down" position you will be able to maintain a plane at the least possible RPMs.

### TRIM TAB PUMP LOCATION

The pump is located in the starboard V-berth storage compartment. The hydraulic fluid should be checked on a seasonal basis.

## 265 EXPRESS

### COCKPIT SHOWER

The cockpit shower is located at the starboard helm sink. To operate the cockpit shower, the water pressure switch located on the accessory panel must be in the "on" position. Pull the shower wand from the deck fitting. Depress the lever on the back of the wand to spray water intermittently. Pull up on the lever for a continuous flow. To reinstall the shower wand gently feed the hose down through the deck fitting.

### WASHDOWN OPERATION

To operate the washdown open the seacock located on the starboard side of the aft rigging compartment. Depress the washdown switch on the accessory switch panel. The washdown system will now be pressurized at the washdown outlet. This fitting should be used with a washdown hose. A washdown hose with a spray nozzle attached may be used intermittently without turning the switch "off". This operation is basically the same as a home yard hose with a nozzle. The washdown pump has an internal pressurization switch that will maintain water pressure as needed until the switch is turned "off" at the switch panel.

### SEACOCKS

Ball valve seacocks are installed on the inlet thru hulls for the livewell and washdown systems, and on the inlet and discharge thru hulls for the head system. It is necessary for the seacocks to be in the open position to operate the systems. The open position is identified by the orientation of the handle. If the handle is in line or parallel to the body of the valve, the seacock is in the open position. If the handle is perpendicular to the body of the valve, the seacock is in the closed position.

#### NOTICE

**All seacocks should be in the closed position if not in use, or if the boat is left unattended, to prevent water from entering the boat if a plumbing component fails.**

## 265 EXPRESS

### LIVEWELL - RAW WATER

To operate the livewell open the seacock located on the port side of the aft rigging compartment. The livewell switch at the helm should be in the "on" position. Place the standpipe in the drain located in the bottom of the livewell box. The standpipe must be pushed down until the black flange makes contact with the flange on the drain fitting. The livewell will fill with water through an inlet fitting near the bottom of the box. The water level will rise to a point even with the strainer on the standpipe and drain overboard.

#### NOTICE

If the seacock is left open and the pump is not "ON", the boat's forward motion through the water will gradually fill the box. To prevent this inadvertent filling close the seacock when the livewell option is not in use.

#### NOTICE

Under certain conditions placing the outboard engine(s) in reverse will ventilate the water under the boat and create an airlock in the livewell pump. To prevent this situation turn the livewell "OFF" prior to any high RPM or constant reverse operation. If the livewell pump becomes airlocked, correct this situation by turning the pump "OFF" for 20 seconds.

### HEAD OPERATING INSTRUCTIONS

#### MARINE HEADS

##### HAND PUMP MARINE HEAD OPERATION

1. Open the marine head inlet seacock (handle in the vertical position). This seacock is located under the access plate in the cabin floor on the starboard side of the keel.
2. Position the wet/dry bowl selector in the wet bowl setting. Fill the toilet with water by pumping the handle several times.
3. **Flush** the toilet by pumping the handle several more times in the wet bowl position.
4. Move the bowl selector to the dry bowl position and pump the handle until almost all of the water is removed. Leave the toilet in the dry bowl position when not in use.

## 265 EXPRESS

### **MARINE ELECTRIC HEAD OPERATION (optional feature)**

1. Open the marine head inlet seacock (handle in the vertical position). This seacock is located under the access plate in the cabin floor on the starboard side of the keel.
2. **Flush** the toilet by turning the flush control knob clockwise on the pump beside the bowl. Turn the flush control knob counter clockwise to remove most of the water from the bowl.

### **EMPTYING MARINE HEAD HOLDING TANK BY USE OF OVERBOARD DISCHARGE**

1. Open the marine head discharge seacock (handle in the vertical position). This seacock under the access plate in the cabin floor on the starboard side of the keel.
2. Press the "SHOW LEVEL" button to indicate the level in the tank.
3. Press and hold the "PUMP OUT" button until the lights on the control panel indicates the tank is empty.
4. Close the discharge seacock (handle in the horizontal position).

### **⚠ CAUTION**

**Overboard discharge seacock must be sealed and secured in the closed position in accordance with the laws in your boating area.**

### **EMPTYING MARINE HEAD HOLDING TANK THROUGH DECK PUMP-OUT**

1. Remove the cap from the deck pump-out fitting located in the starboard walkaround.
2. Connect a vacuum hose from a pump-out station to the deck fitting and run until the tank is empty. Replace the cap on the deck pump-out fitting.

**Reference the Marine Head Layout diagram at the end of this chapter.**

## **265 EXPRESS**

### **OPERATION OF OPTIONAL FEATURES**

#### **COMPASS**

The compass is located at the helm station in direct view of the operator when navigating the boat. Following the instructions in the compass manual included in the "Owners Packet" will help you make compensation adjustments to the compass if needed.

#### **OUTRIGGERS**

Outriggers allow you to spread the fishing lines trolled from your boat and decrease the chance of entanglement.

##### **ADVANTAGES**

Advantages of outriggers include: offering bait throughout a larger area behind the boat, placing bait out of the wake zone, automatic drop back following strikes (which allows for fish to completely accept bait) and a reduction in unnecessary twisting action characteristic of artificial bait.

##### **INSTRUCTIONS**

For proper installation and use reference the instruction sheet included in your "Owner's Packet".

##### **CARE AND MAINTENANCE**

Outriggers should be washed with fresh water, mild soap and a soft cloth. Never use acidic or abrasive cleaners to clean your outriggers.

A periodic waxing of the outriggers is suggested if your boat is frequently exposed to salt water. The wax will provide a protective coating and seal the pores of the metal. A non-abrasive high quality marine or automotive wax is recommended. Always clean and wax the outriggers before storage.

During assembly grease all threads, bolts and tubes where one section is inserted into another. Disassemble and regrease all applicable surfaces on an annual basis.

## 265 EXPRESS

### DOCKSIDE POWER

The dockside power feature allows the use of AC equipment on board the boat. This equipment includes any permanently installed appliances such as a battery charger or water heater or it may be a household item plugged into a receptacle. The dockside power is utilized by connecting the heavy-duty cable supplied with the boat to an appropriate external power source. This cable provides power to the boat's AC inlet that is wired to the AC panel. The AC panel allows for distribution to the various appliances and outlets. See the Dockside Wiring diagram at the end of this chapter for more information on component location and wiring specifics

#### **⚠ CAUTION**

**Always disconnect the dockside power cable if leaving the boat unattended for an extended period of time.**

### CONNECTING THE DOCKSIDE POWER

1. Verify that the external power source is a 3 wire grounded system with amperage and voltage ratings compatible with the boat's AC system ratings.
2. Be sure there is sufficient cable length to allow for normal movement between the boat and the dock.
3. Turn all AC panel switches (including the MAIN) to the "OFF" position. Turn the circuit breaker at the dock outlet to "OFF".
4. Connect the dockside power cable at the boat inlet first.
5. Connect the dockside power cable at the dock outlet and turn the dock outlet circuit breaker to "ON".
6. Turn the MAIN circuit breaker to the "ON" position.

#### **NOTICE**

If there is no power at the AC panel after completing the above steps, check the in-line circuit breaker under the starboard deckwing. This breaker protects the wiring between the cable inlet and the AC panel and must be in the "ON" position for the panel to receive power.

#### **⚠ WARNING**

**If the reverse polarity indicator on the AC panel is activated immediately disconnect the dockside power cable and have a qualified electrician correct the fault.**

### DISCONNECTING THE DOCKSIDE POWER

1. Switch all circuit breakers at the boat's AC panel "OFF".
2. Switch the circuit breaker "OFF" at the dock outlet.
3. Disconnect the dockside power cable at the dock outlet first.
4. Disconnect the dockside power cable at the boat inlet.


#### **NOTICE**

Keep inlet cover closed tightly when not in use.

## 265 EXPRESS

### AC/DC PANEL

The 265 Express AC/DC panel is located in the aft wall of the cabin on the starboard side. AC and DC powered switches are noted below. A wiring diagram of the AC/DC panel is located at the end of this chapter.

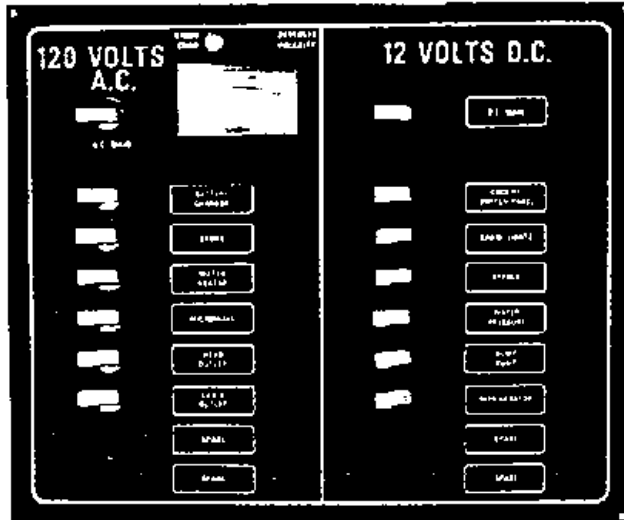

### AC POWERED ACCESSORY SWITCHES

Dockside power must be connected to shore and the circuit breaker located under the starboard gunwale. The breaker must be in the "on" position for the following switches to operate. The AC panel wiring and the receptacle wiring schematic diagrams are provided at the end of this chapter.

#### MAIN POWER SWITCH

The main power switch must be in the "on" position to distribute power to the other various accessory switches.

#### BATTERY CHARGER SWITCH

The battery charger has indicator lights that display the state of batteries during operation.

#### STOVE

Reference the manufacturer's Operation Manual for information on safe handling and proper procedures prior to using the stove.

**WARNING**  
**UNDERSTAND THE INSTRUCTIONS AND  
WARNINGS BEFORE OPERATING YOUR STOVE.**

#### WATER HEATER SWITCH

This switch activates the six-gallon water heater.

**WARNING**  
**TO AVOID HEATING ELEMENT FAILURE DO NOT TURN ON THE  
HOT WATER HEATER UNLESS IT IS FILLED WITH WATER.**



## **265 EXPRESS**

### **MICROWAVE**

An outlet has been designated for microwave use only. Read instructions in the manufacturer's Operating Manual before using your microwave.

### **OUTLET SWITCHES**

This breaker provides power to three electrical outlets. The head outlet, located in the cabinet of the head compartment, is a duplex ground fault receptacle and is equipped with a cover plate. The cabin and helm station outlets are duplex receptacles with cover plates. The cabin and helm receptacles are wired in series with the head outlet and have ground fault protection.

### **DC POWERED ACCESSORY SWITCHES**

#### **MAIN POWER SWITCH**

The main power switch must be in the "on" position to operate the DC accessory switches.

#### **COCKPIT SWITCH PANEL**

This switch activates the accessory switches at the helm accessory panel.

#### **CABIN LIGHTS**

This switch provides power for the dome and reading lights located in the cabin.

#### **STEREO**

This switch furnishes power to the stereo.

#### **WATER PRESSURE SWITCH**

This switch powers the 38 gallon pressurized fresh water system for the galley faucet, head faucet, cockpit rigging station and cockpit shower.

#### **SHOWER SUMP PUMP**

The shower sump pump pumps water from the shower floor overboard. This unit is located under the cabin sole floor and can be reached through the access plate.

#### **REFRIGERATOR**

Refer to the manufacturer's Operating Manual in your "OWNER'S MANUAL PACKET" for operation and maintenance instructions.

## 265 EXPRESS

### BATTERY CHARGER

This feature is located in the aft port battery compartment. The generator or the dockside power must be performing for the charger to work. To activate the charger, turn the AC panel breaker switch to the "ON" position. At the point that the batteries are almost fully charged, the charger will automatically reduce the current being sent to the batteries to a maintenance level. See the charger Operation Manual in your "owner's packet" for further information.

### MICROWAVE

The dockside power must be connected or the generator must be operating for the microwave to function. Refer to the Microwave Operation and Maintenance manual in your "owner's packet" for specific instructions on the safe and proper use of the microwave.

### WATER HEATER

The generator must be operating or the dockside power connected with the AC breaker switch "ON" for the water heater to function. This will provide hot water to the pressurized fresh water system. Follow the Water Heater Operation and Maintenance manual provided in the "Owner's Packet" for instructions and care of the water heater.

### BATTERY SELECT SWITCH

The 265 Express is equipped with three batteries and two select switches. Two of the batteries are wired in parallel and function as a single battery bank (#1 position on the switches). The third battery is a separate bank (#2 position on the switches). Reference the Battery Select Wiring diagram at the end of this chapter for the layout of the batteries and switches.


An outboard engine should be connected to each battery select switch. Either engine may be started with either battery bank by selecting position #1 or position #2 on the select switches. In normal use, select position #1 on the starboard switch and position #2 on the port switch so that both battery banks will be charged simultaneously when the engines are running. The DC accessories on the boat will always be controlled by the starboard switch. This recommended setting also insures that the accessories are being powered by the larger battery bank.

### **WARNING**

**Never turn the battery select switch to the "OFF" position with the engine(s) running or the charging system could be damaged.**


# 265 EXPRESS

## AC/DC PANEL WIRING

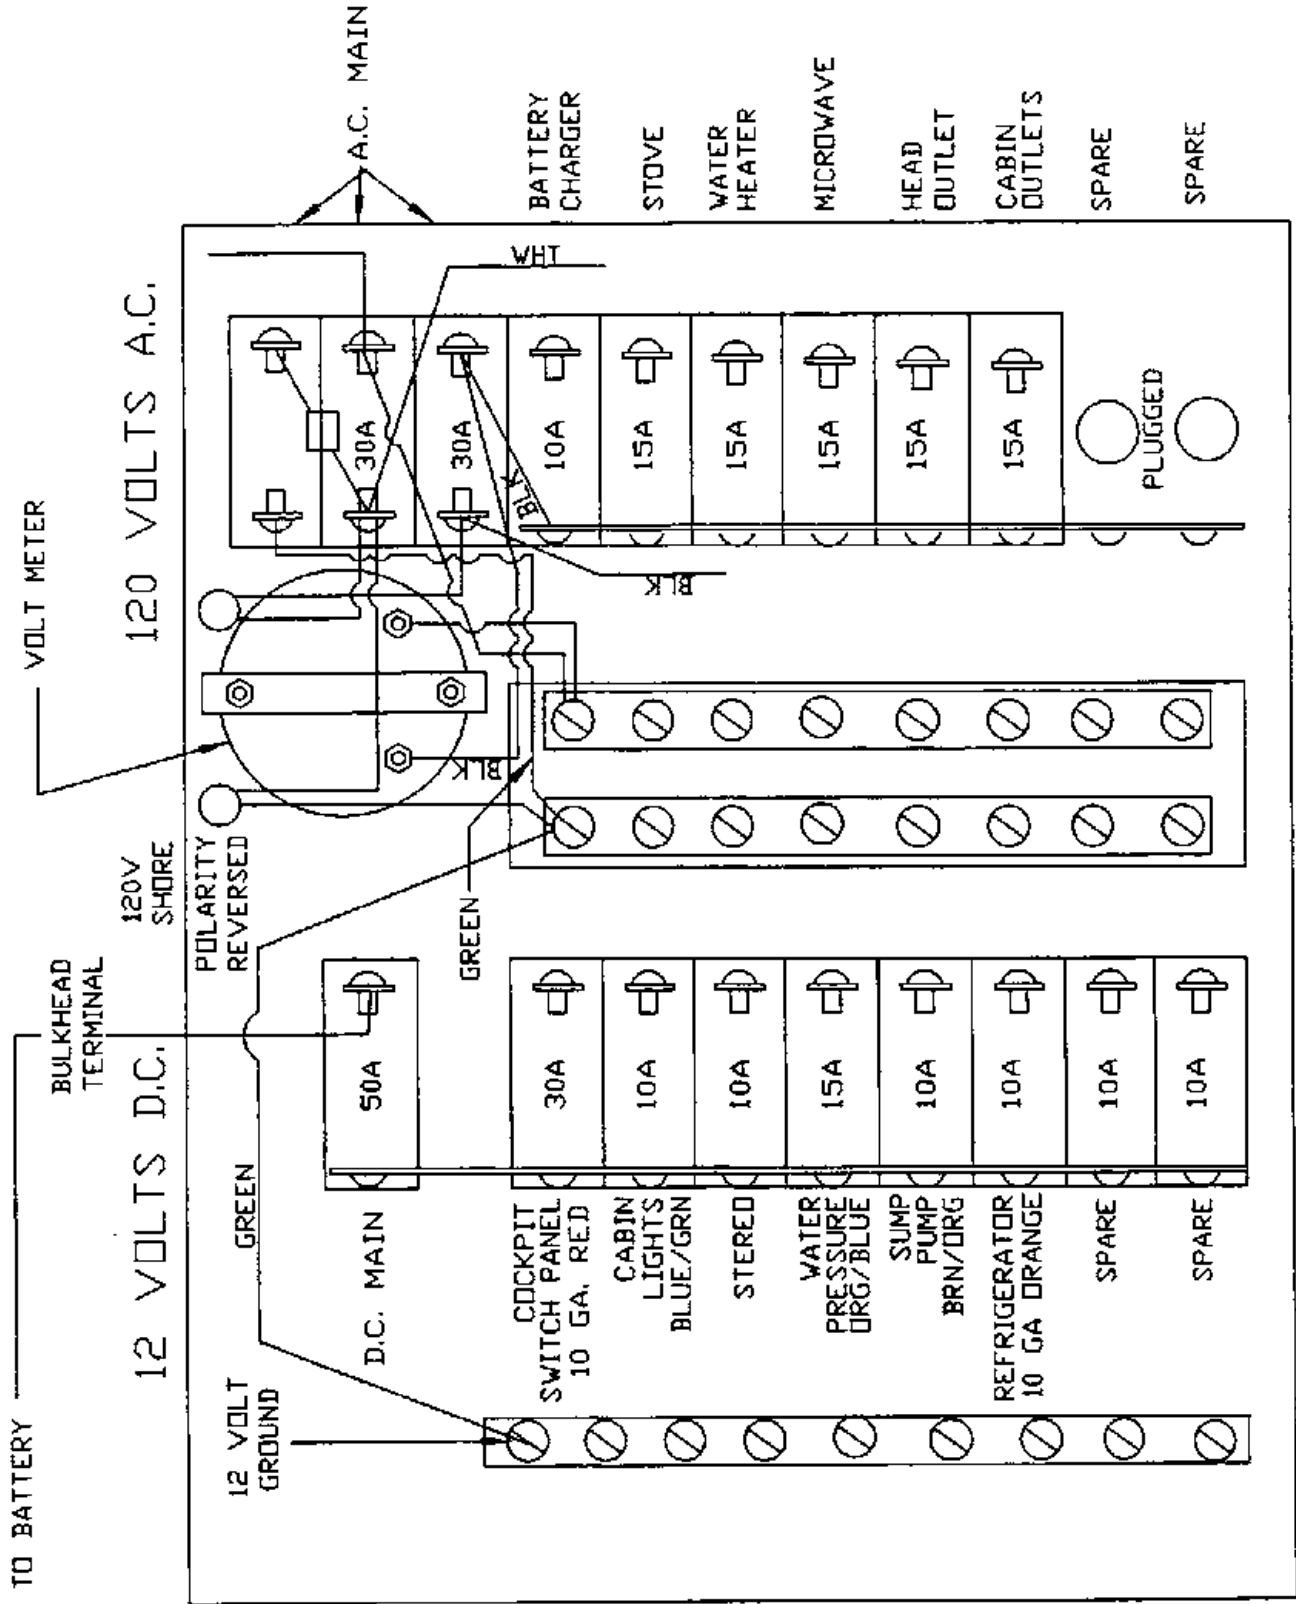


# 265 EXPRESS

## ACCESS PLATE AND RIGGING TUBE LOCATIONS

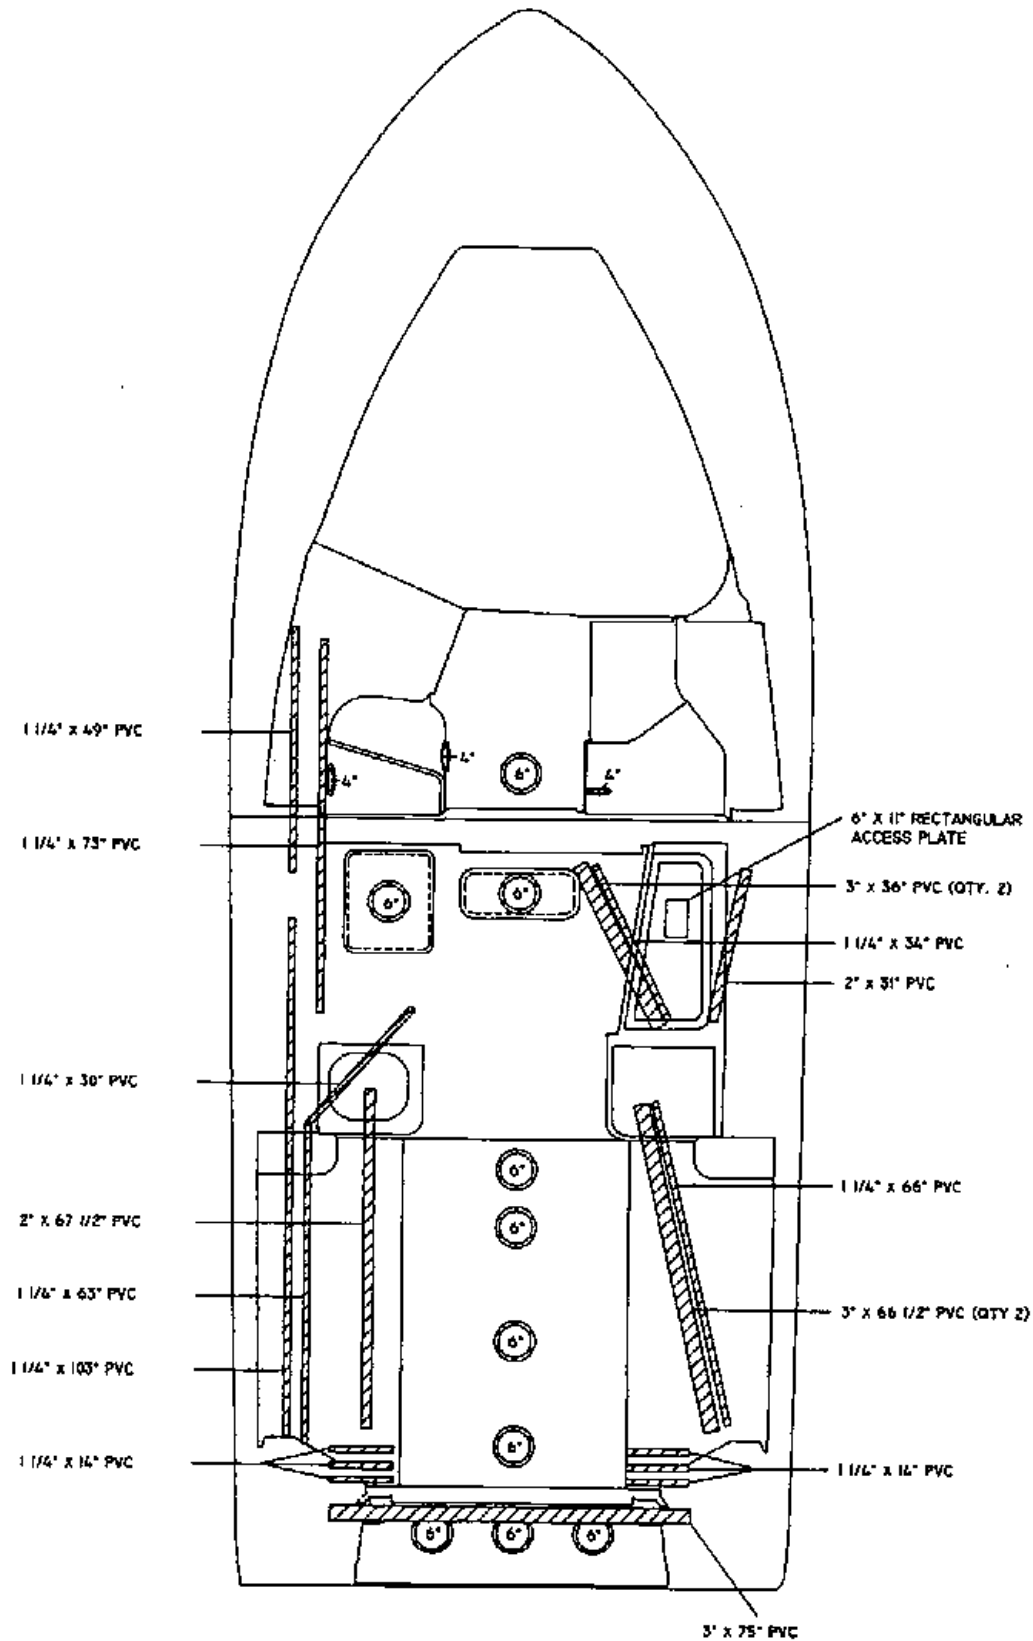


# 265 EXPRESS

## ACCESSORY WIRING

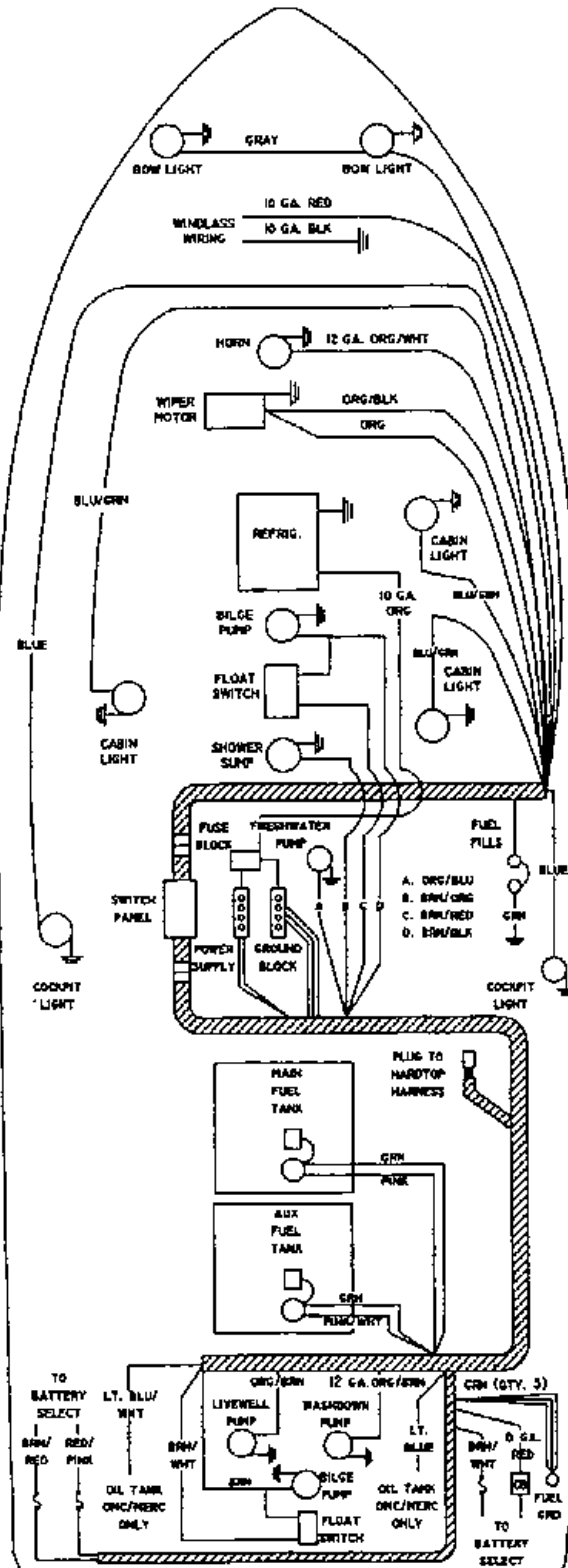


265 EXPRESS

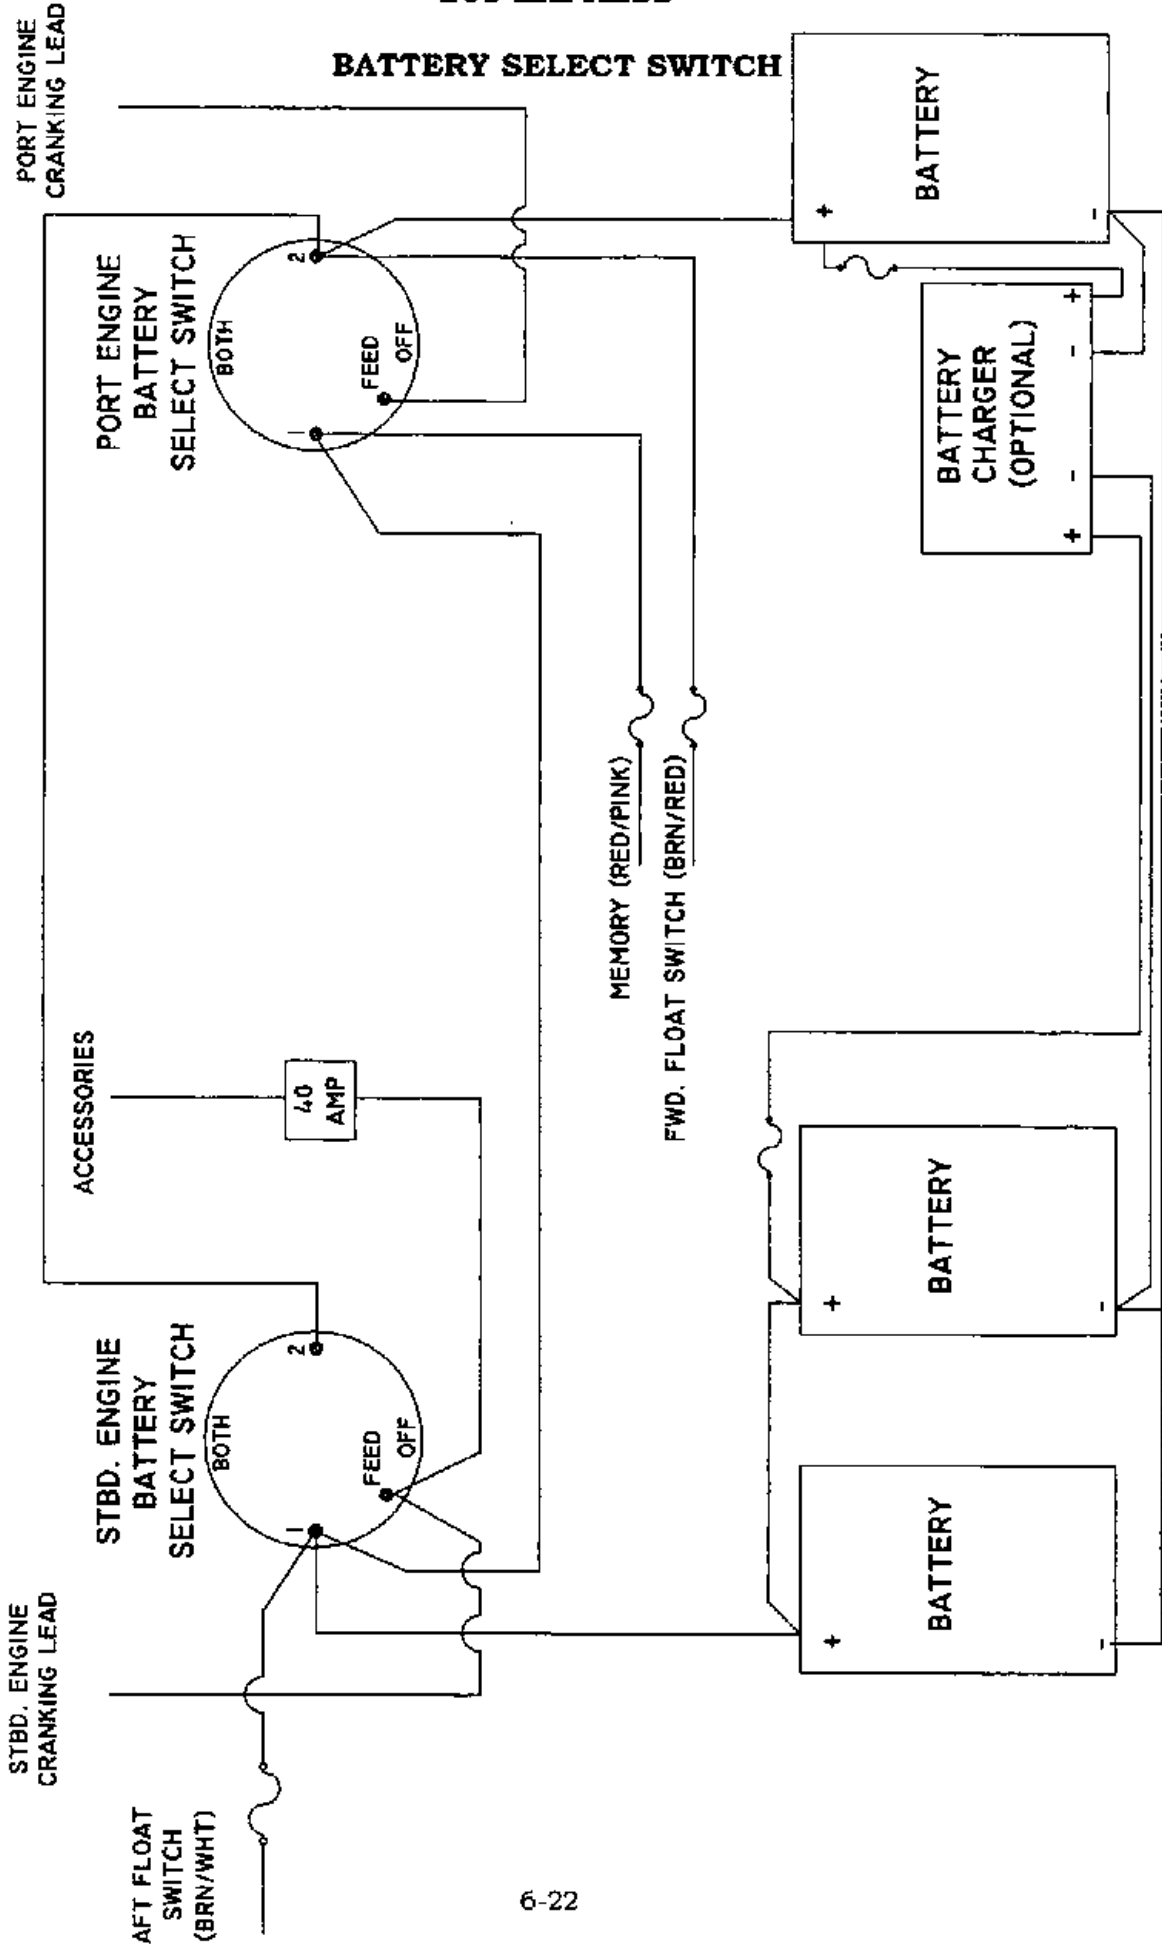


# 265 EXPRESS

## DOCKSIDE POWER

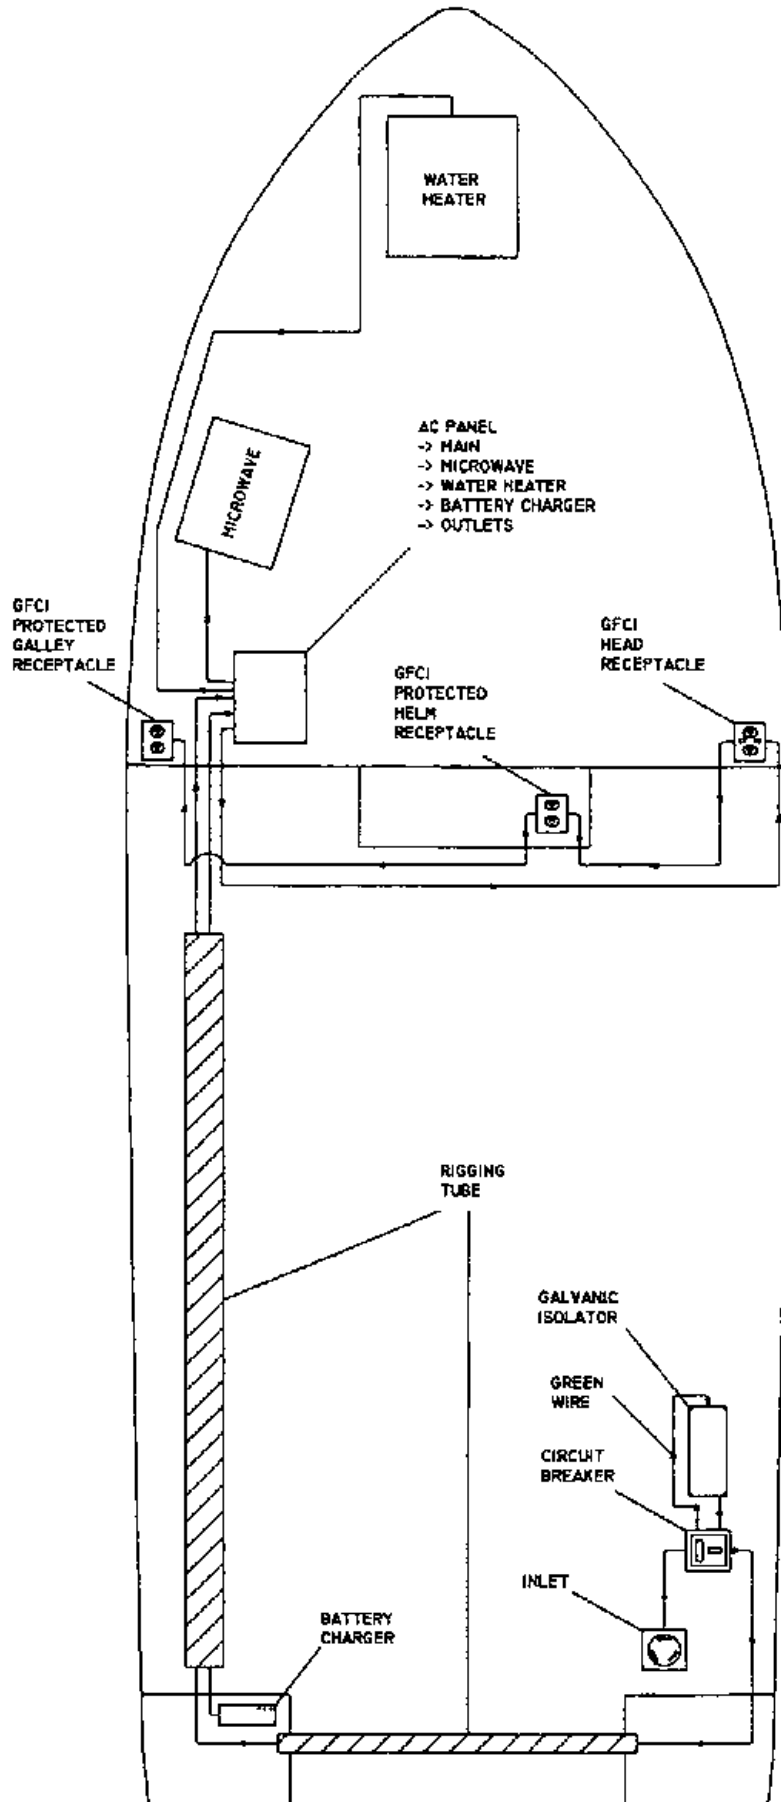


265 EXPRESS  
HARDTOP WIRING

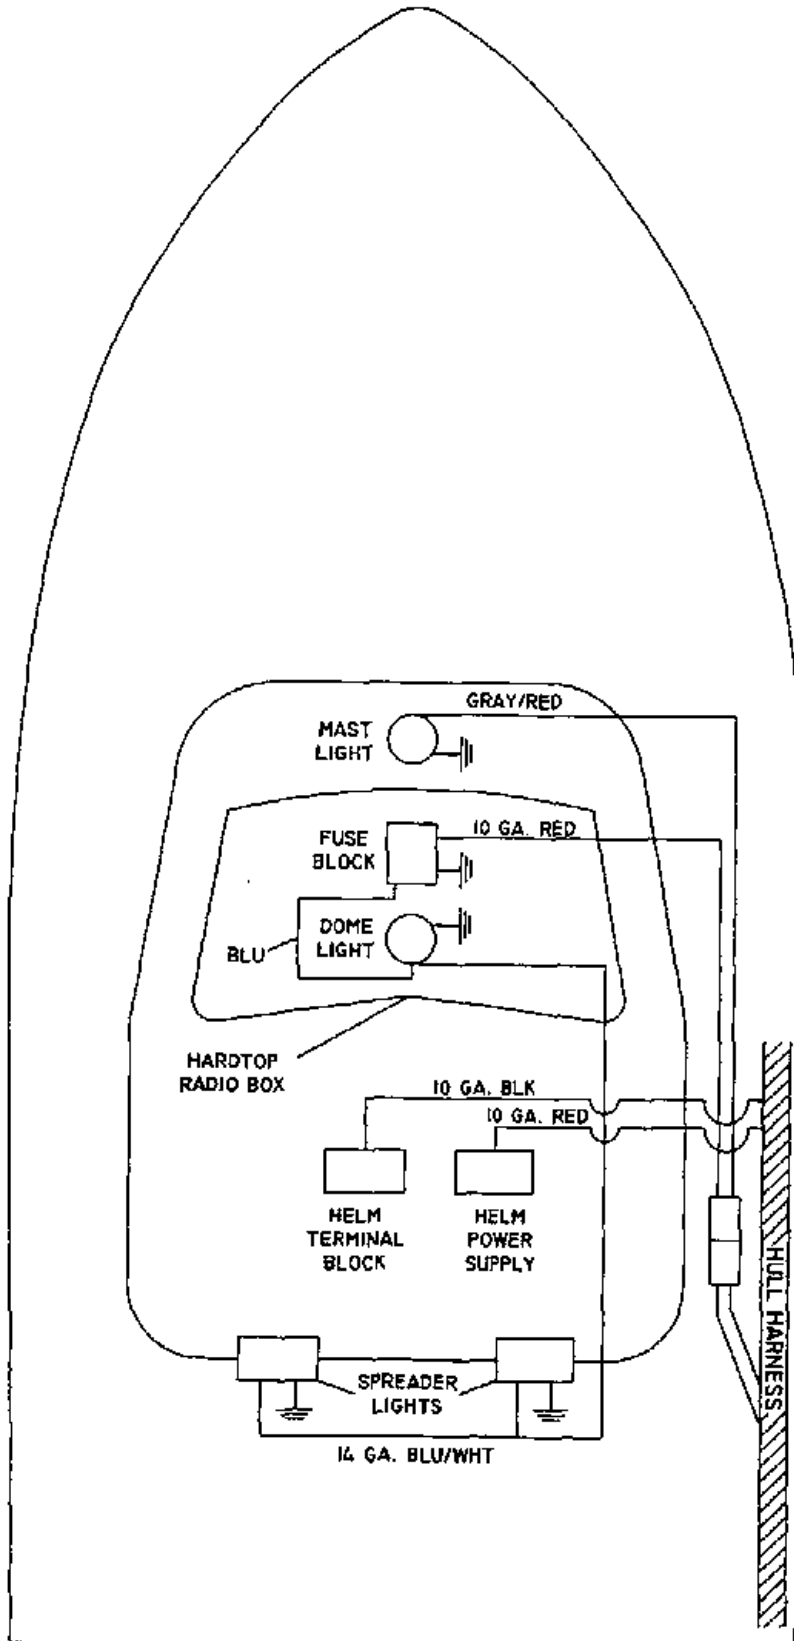




# 265 EXPRESS

## HEAD LAYOUT - MARINE

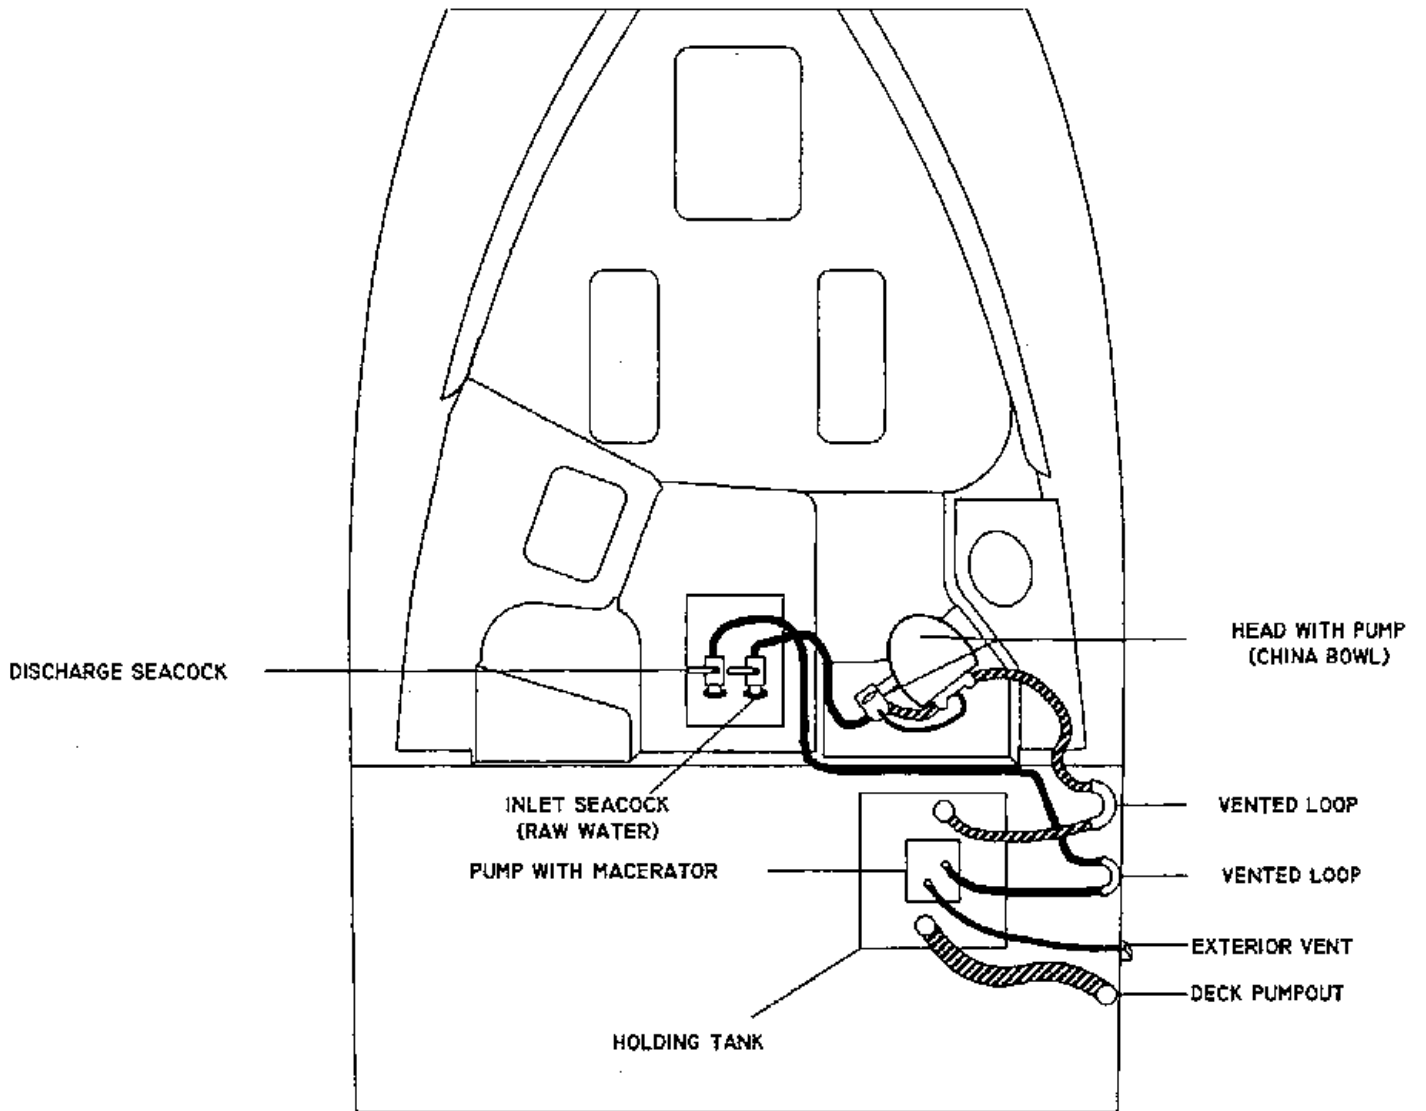

# 265 EXPRESS

## LABELS AND LOCATION

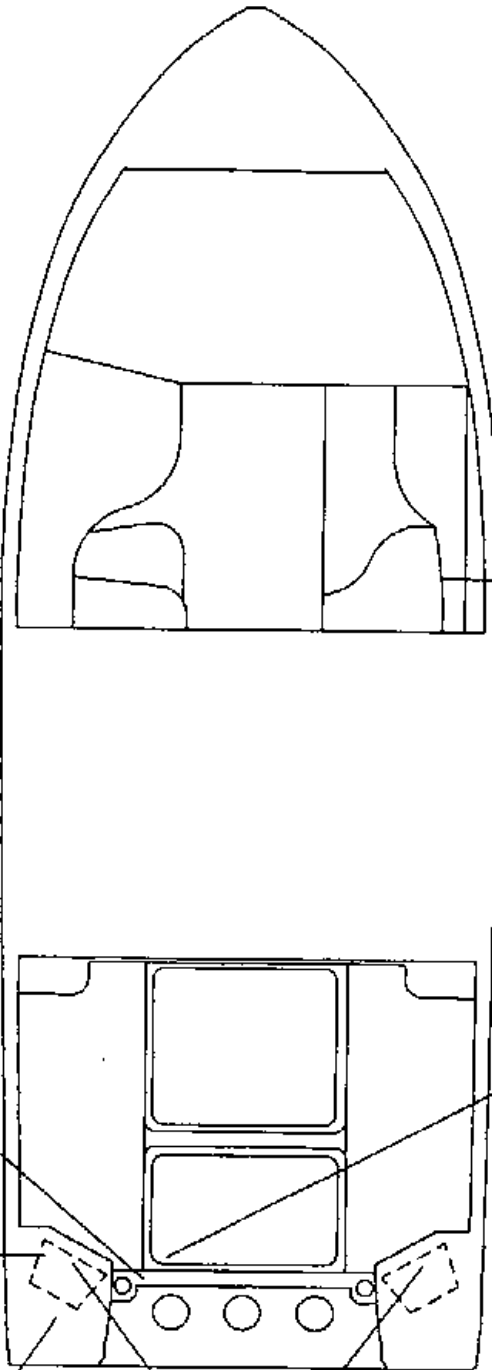

**CAUTION**  
THIS MARINE HEAD SYSTEM WILL FLUSH, MACERATE, AND DISCHARGE WASTE AND MARINE/RV TOILET TISSUE ONLY. ANY OTHER MATERIALS CAN RESULT IN DAMAGE OR SYSTEM MALFUNCTION.

HEAD COMPARTMENT

**WARNING**  
ACCESS HATCH AND MOUNTING SCREWS MUST BE SEALED AFTER RIGGING TO INSURE WATERTIGHT INTEGRITY. INSPECT FREQUENTLY AND RESEAL WITH SILICONE SEALER IF REQUIRED.

RIGGING LID

**CAUTION**  
NO STEP

MOTORWELL DAM

**WARNING**  
LEAKING FUEL IS A FIRE AND EXPLOSION HAZARD. INSPECT SYSTEM REGULARLY. EXAMINE FUEL SYSTEM FOR LEAKS OR CORROSION AT LEAST ANNUALLY.

INSIDE AFT RIGGING COMPARTMENT

**DANGER**  
DO NOT BOARD PLATFORM WITH ENGINE(S) RUNNING.


SWIM PLATFORM

FUEL SELECTOR VALVE  
OFF  
LUX ——— HORN  
**WARNING**  
CHECK FOR LEAKING FUEL

INSIDE AFT RIGGING COMPARTMENT


# 265 EXPRESS

## LIVEWELL/WASHDOWN SYSTEM

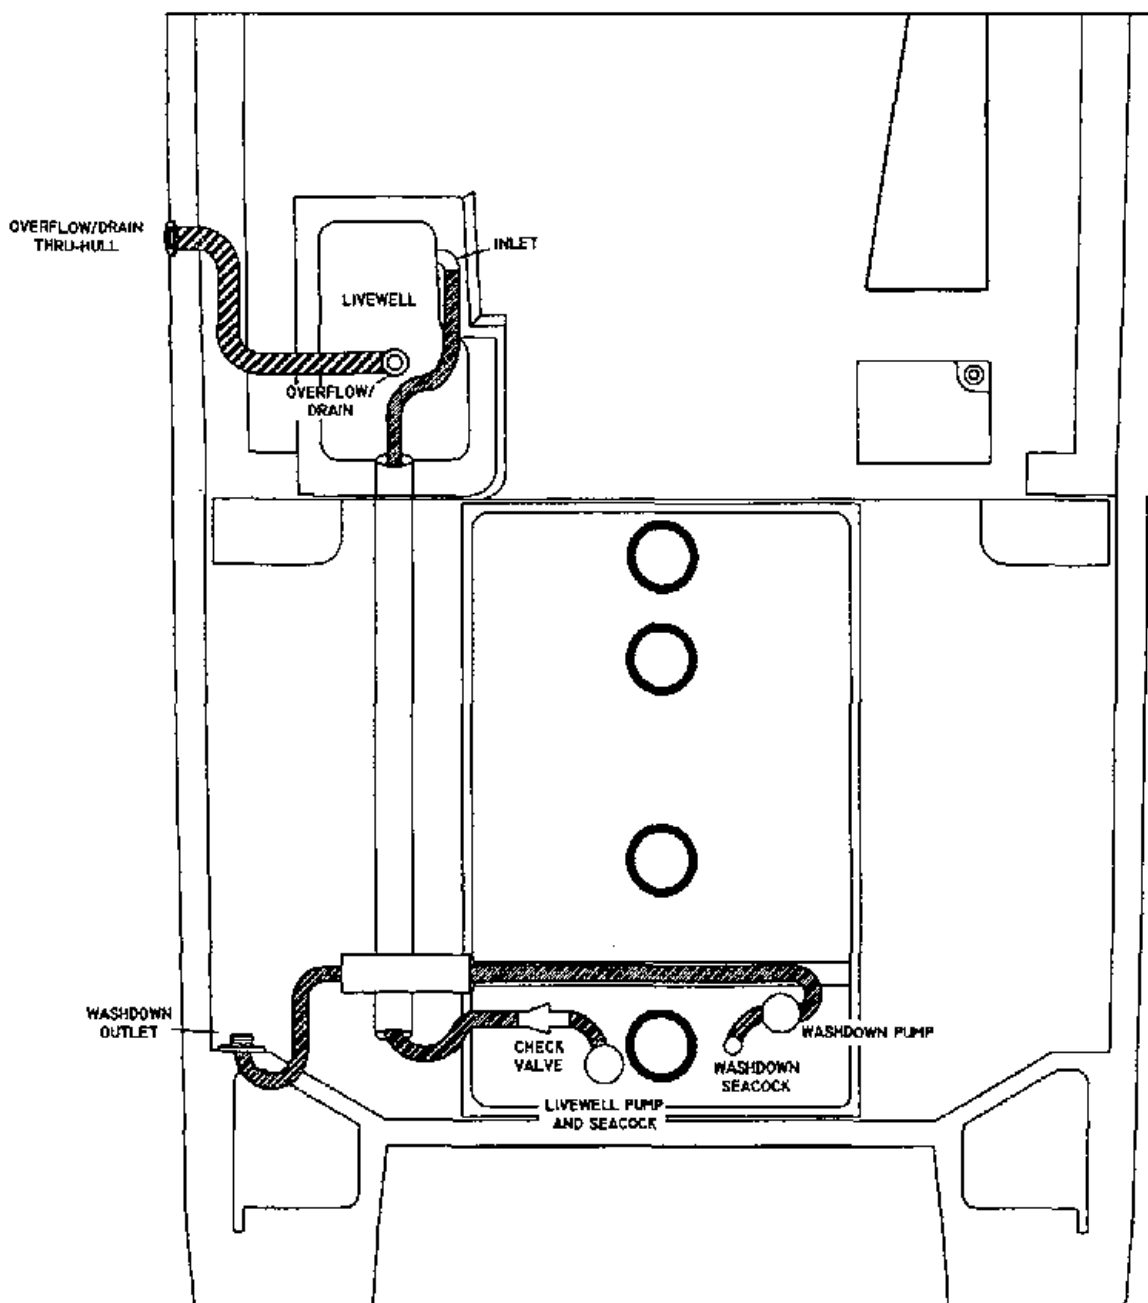

# 265 EXPRESS

## PRESSURIZED FRESH WATER SYSTEM

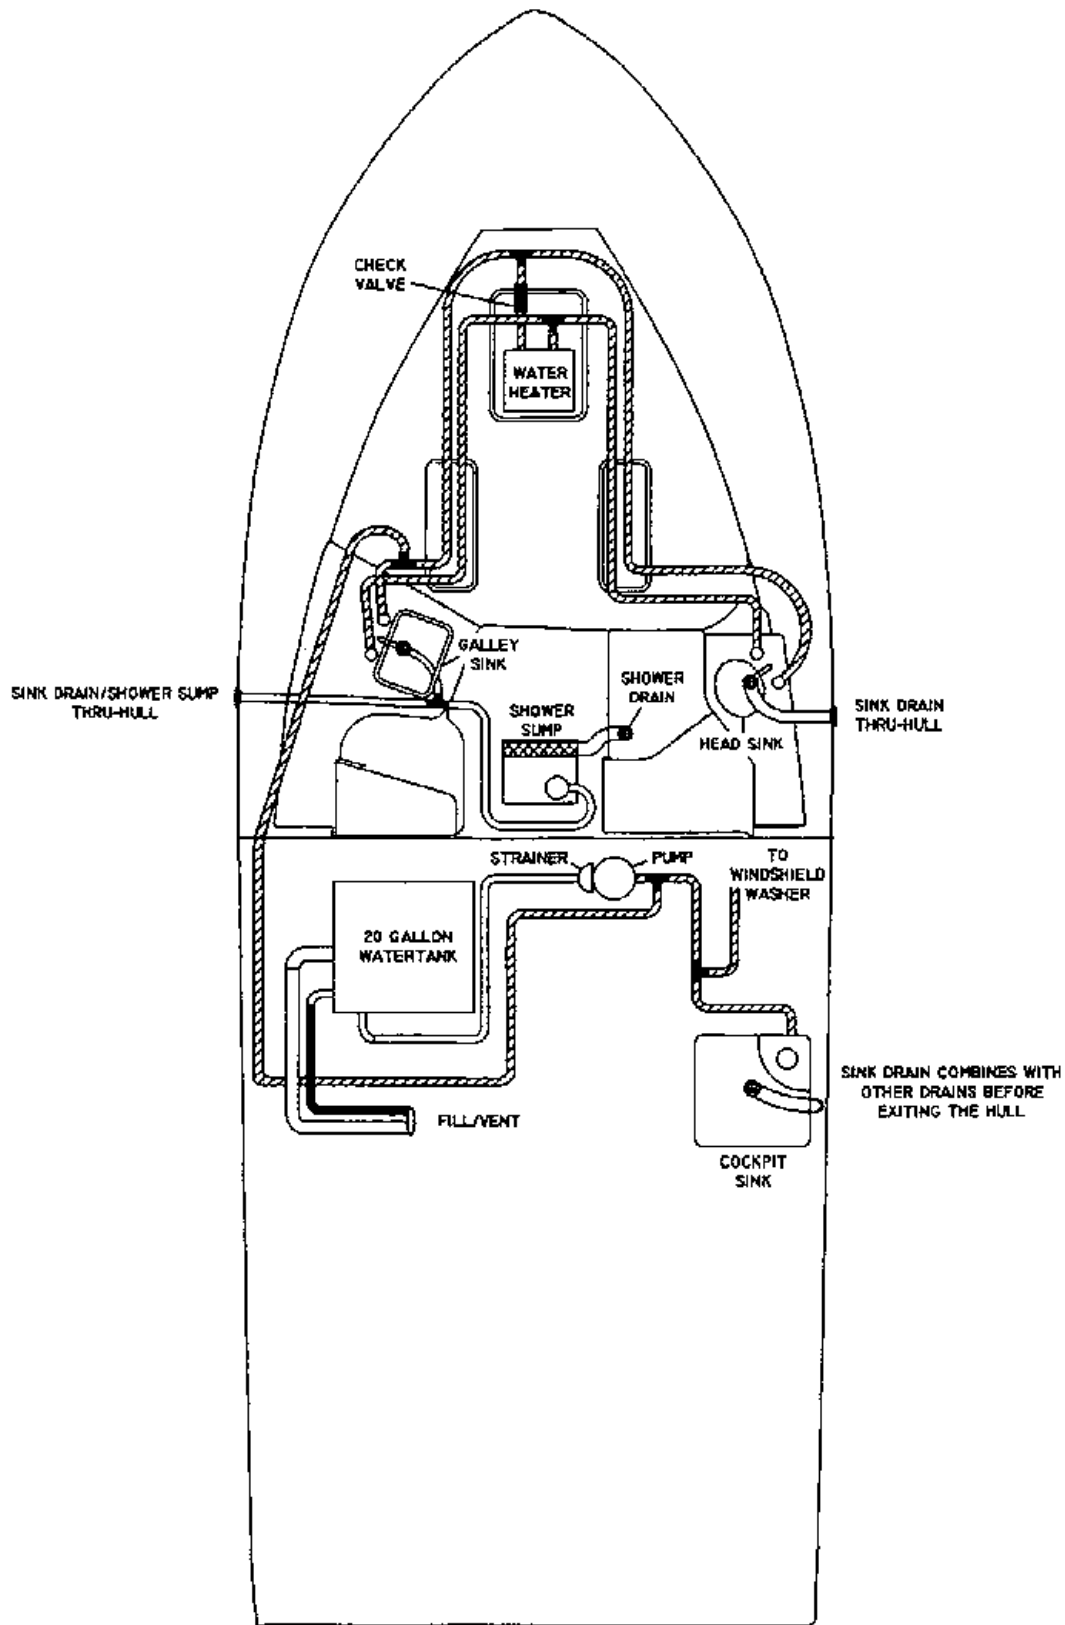

# 265 EXPRESS

## THRU HULL DETAIL

- A. FWD. BILGE
- B. SINK/SHOWER
- C. COOLER DRAIN
- D. LIVEWELL DRAIN/OVERFLOW
- E. AFT BILGE
- F. ICEBOX/FISHBOX/SINK DRAIN
- G. HEAD VENT
- H. HEAD SINK
- I. LONG SCUPPER

